LG
Life's Good

OWNER'S MANUAL
PLASMA TV

Please read this manual carefully before operating the set and retain it for future reference.

www.lg.com

LICENSES

Supported licenses may differ by model. For more information about licenses, visit *www.lg.com.*

Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

“DivX Certified® to play DivX® video up to HD 1080p, including premium content.”

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

Covered by one or more of the following U.S. patents :
7,295,673; 7,460,668; 7,515,710; 7,519,274

TABLE OF CONTENTS

2 LICENSES

6 ASSEMBLING AND PREPARING

6 Unpacking
7 - Additional accessories
9 Separate purchase
9 Parts and buttons
11 Lifting and moving the TV
11 Setting up the TV
11 - Attaching the stand
12 - Mounting on a table
13 - Mounting on a wall
15 - Tidying cables
15 - Attaching Pen Holder Bracket

16 REMOTE CONTROL

18 WATCHING TV

18 Connecting an antenna
18 Turning the TV on for the first time
19 Watching TV
19 Managing programmes
19 - Automatically setting up programme
21 - Cable DTV Setting (In Cable mode only)
21 - Manually setting up programme (In digital mode)
22 - Manually setting up programme (In analogue mode)
23 - Booster
23 - Editing your programme list
25 - CI [Common interface] Information
26 - Selecting the programme list
27 EPG (Electronic Programme Guide) (In digital mode)
27 - Switch on/off EPG
27 - Select a programme
28 - NOW/NEXT Guide Mode
28 - 8 Day Guide Mode
28 - Date Change Mode
28 - Extended Description Box
28 - Record/Remind Setting Mode
29 - Schedule List Mode
29 Using additional options
29 - Adjusting aspect ratio
31 - Changing AV modes
31 - Using the input list
32 - Locking the buttons on the TV (Child Lock)
33 Using the quick menu
34 Using the customer supprot
34 - Testing Software Update
35 - Testing the Picture / Sound
35 - Using Signal Test
35 - Using the product or service information

36 PENTOUCH

36 Using Pentouch
37 - Step of using the Pentouch program
37 - System Requirements
37 - Installing the Pentouch Program
38 - Installing the USB Dongle Driver
38 - Removing the Pentouch Program and Driver
39 - Pairing between Touch Pen and Dongle
41 - Using the Pentouch Function
43 Checking the Pentouch Functions
44 - Using Toolbar
45 - Using Sketchbook
47 - Using Photo Editor
48 - Using Family Diary
49 - Using Gallery
50 - Using the Internet Function
51 - Using the My Office function

52 3D IMAGING

52 3D Technology
53 - When Using 3D Glasses
53 - 3D Imaging Viewing Range
54 Watching 3D images

ENGLISH

56 ENTERTAINMENT

56 - Connecting to a wired network
57 - Network Status
58 - Connecting USB storage devices
59 - Browsing files
60 - Viewing movies
63 - Viewing photos
65 - Listening to music
67 - DivX registration code

68 CUSTOMIZING TV SETTINGS

68 Accessing main menus
69 Customizing settings
69 - SETUP settings
70 - PICTURE settings
76 - AUDIO settings
79 - TIME settings
80 - LOCK settings
81 - OPTION settings
83 - NETWORK Settings

84 MAKING CONNECTIONS

85 Connection overview
86 Connecting to a HD receiver, DVD, or VCR player
86 - HDMI connection
86 - DVI to HDMI connection
86 - Component connection
87 - Euro Scart connection
87 - Composite connection
87 Connecting to a PC
87 - HDMI connection
88 - DVI to HDMI connection
88 - RGB Connection
89 Connecting to an audio system
89 - Digital optical audio connection
89 Connecting to a USB
89 Connecting to a CI Module
90 SIMPLINK connection
90 - Activating the SIMPLINK feature

91 TELETEXT

91 Switch On/Off
91 Simple Text
91 - Page selection
91 Top Text
91 - Block / Group / Page Selection
91 - Direct Page Selection
92 Fastext
92 - Page selection
92 Special Teletext Function

93 DIGITAL TELETEXT

93 Teletext within digital service
93 Teletext in digital service

94 MAINTENANCE

94 Cleaning your TV
94 - Screen and frame
94 - Cabinet and stand
94 - Power cord
95 Preventing “Image burn” or “Burn-in” on your TV screen

96 TROUBLESHOOTING

98 SPECIFICATIONS

101 IR CODES

102 EXTERNAL CONTROL DEVICE SETUP

102 RS-232C Setup
102 Type of connector; D-Sub 9-Pin Male
102 RS-232C Configurations
103 Communication Parameters
103 Command reference list
104 Transmission / Receiving Protocol

109 OPEN SOURCE LICENSE

109 Open source software notice

ENGLISH

ASSEMBLING AND PREPARING

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.



Remote control and batteries(AAA)

Owner's Manual
& Pentouch Software

Polishing cloth[1]
(Depending on model)
(This item is not included for all models.)

Ferrite core
(Depending on model)
(This item is not included for all models.)

Power Cord (This item is not included for all models.)

1 Gently wipe the spots on the cabinet with the polishing cloth.



x 8

M5 x 18



x 2 x 4

M6 x 28 M4 x 22

(Only 50PT49**,50PZ85**)



x 2 x 4

M8 x 35 M5 x 18

(Only60PZ85**)

Screw for assembly

x 2

Eye-bolt &
Wall bracket

Power Cord holder

Cable Holder

Protection cover

Protection cover
tape



D-sub 15 pin signal cable

3D Glasses
(AG-S250:Depending on model)
(This item is not included for all models.)

Pen Holder Bracket[1]

1 You can attach the pen holder bracket in a position that is convenient for you.
The number of pen holder bracket may differ depending on the model.

ENGLISH

Additional accessories

Touch pen dongle
(AN-TD200)

Charging Cable

Touch pen[1]
(AN-TP200)



Pentouch Caution Guidelines
& Owner’s manual

1 The number of touch pen may differ depending on the model.

The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

CAUTION

- Do not use any pirated items to ensure the safety and product life span.
- Any damages or injuries by using pirated items are not covered by the warranty.

ENGLISH

NOTE

- The items supplied with your product may vary depending on the model and the country.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- Image shown may differ from your TV.

How to use the ferrite core (Depending on model)

1 Use the ferrite core to reduce the electromagnetic interference in the PC audio cable.
Wind the PC audio cable on the ferrite core A once.
Wind the PC audio cable on the ferrite core B thrice.



[Figure 1]

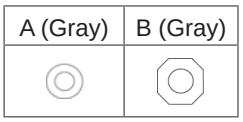

[Cross Section of Ferrite Core]

2 Use the ferrite core to reduce the electromagnetic interference in the power cable.
Wind the power cable on the ferrite core C once.

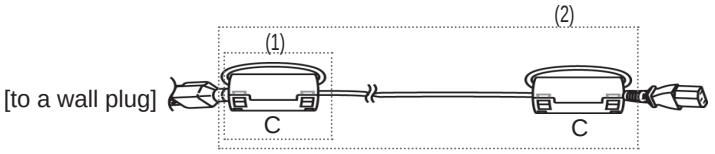

[Figure 2]

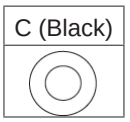

[Cross Section of Ferrite Core]

3 Use the ferrite core to reduce the electromagnetic interference in the LAN cable. Wind the LAN cable once on the ferrite core B and thrice on the ferrite core D.



[Figure 3]

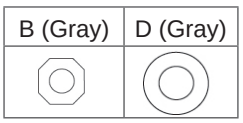

[Cross Section of Ferrite Core]

- In case of 60PZ85**, follow as shown in Figure 2(1).
- In case of 50PZ85**, 50PT49**, follow as shown in Figures 1, 2(2).
- If there is LAN port, additionally follow as shown in Figure 3.

Separate purchase

Separate purchase items can be changed or modified for quality improvement without any notification.
Contact your dealer for buying these items.
This device only works with compatible LG Plasma TV.

3D Glasses
(AG-S230, AG-S250, AG-S270
: Only 3D Models)

Touch pen dongle
(AN-TD200)

Touch pen
(AN-TP200)

The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

ENGLISH

Parts and buttons

NOTE

- TV can be placed in standby mode in order to reduce the power consumption. And TV should be turned off if it will not be watched for some time, as this will reduce energy consumption.
- The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

CAUTION

- Do not step on the glass stand or subject it to any impact. It may break, causing possible injury from fragments of glass, or the TV may fall.
- Do not drag the TV. The floor or the product may be damaged.
- In case of some model, the thin film on screen is a part of TV. So don’t take it off.

- Image shown may differ from your TV.

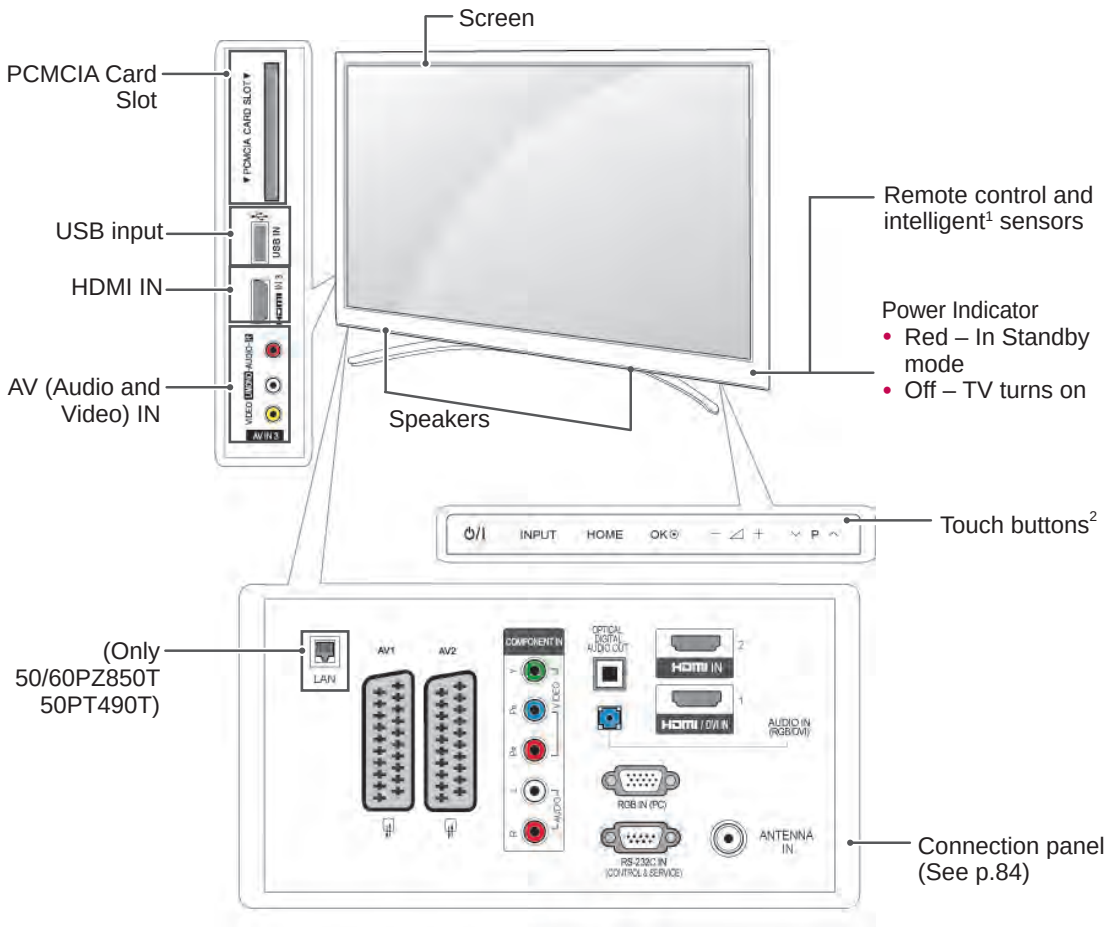

Touch Button	Description
⏻/I	Turns the power on or off
INPUT	Changes the input source
HOME	Accesses the main menus, or saves your input and exits the menus
OK⊙	Selects the highlighted menu option or confirms an input
− ◿ +	Adjusts the volume level
⌄ P ⌃	Scrolls through the saved programmes

1 Intelligent sensor - Adjusts the image quality corresponding to the surrounding environment.

2 Touch Button - You can use the desired button function by touching.

Lifting and moving the TV

When moving or lifting the TV, read the following to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

CAUTION

- Avoid touching the screen at all times, as this may result in damage on the screen or some of the pixels used to create images.

- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to prevent the screen from scratches.

- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

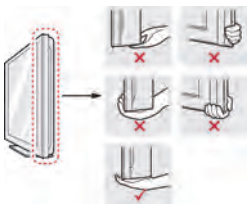

- When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.

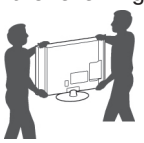

- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.

Setting up the TV

- Image shown may differ from your TV.

Put your TV on a pedestal stand and mount the TV on a table or wall.

Attaching the stand

1 Lay the TV with the screen side down on a flat surface.

CAUTION

- Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. Make sure no objects press against the screen.

2 Push the supplied protection cover into the opening at the bottom of the TV until it locks in place.

Attach the protection cover tape.
- This will protect the opening from accumulating dust and dirt.
- When installing the wall mounting bracket, use the Protection cover.

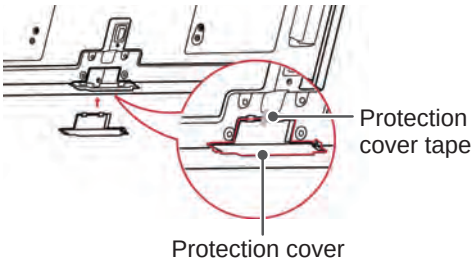

3 Assemble the parts of the Stand Pole with the TV.

Model	Screw for assembly	Number of screws
50PT49**,50PZ85**	M6 x 28	2
60PZ85**	M8 x 35	2

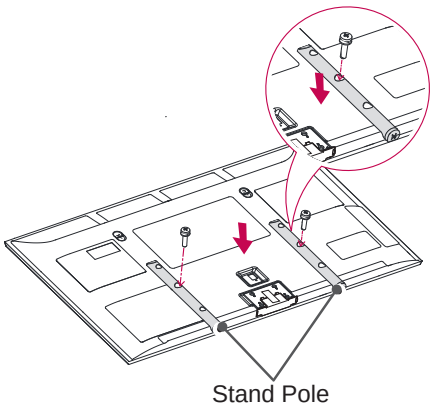

ENGLISH

Model	Screw for assembly	Number of screws
50PT49**,50PZ85**	M4 x 22	4
60PZ85**	M5 x 18	4

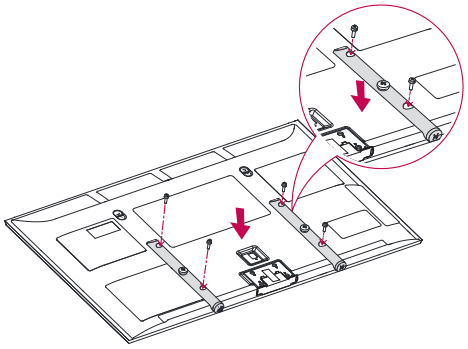

4 Secure the TV and the Stand Base with the 8 screws.

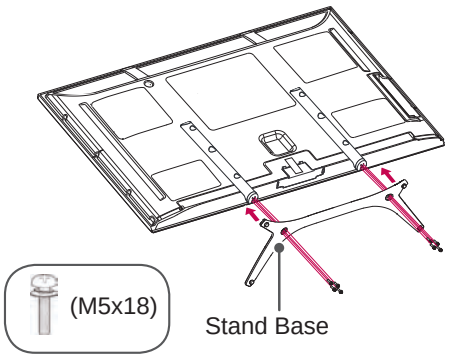

CAUTION

- Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten.

Mounting on a table

- Image shown may differ from your TV.

1 Lift and tilt the TV into its upright position on a table.
- Leave a 10 cm (minimum) space from the wall for proper ventilation.

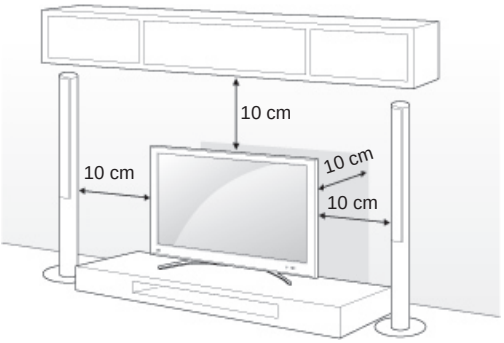

2 Connect the power cord to a wall outlet.

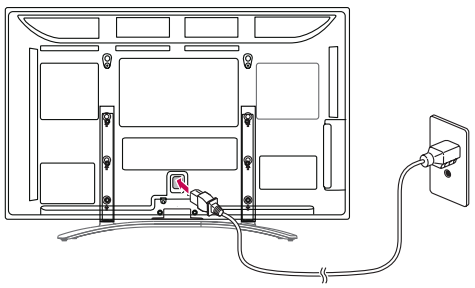

CAUTION

- Do not place the TV near or on sources of heat, as this may result in fire or other damage.

ENGLISH

Securing the TV to a wall

- Image shown may differ from your TV.

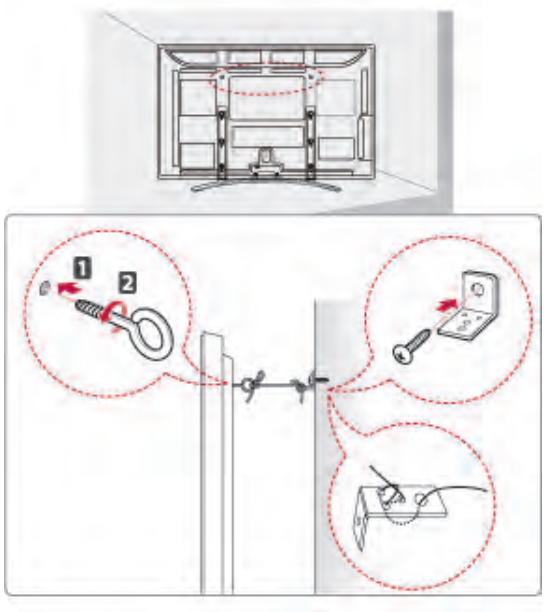

1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
   - If there are bolts inserted at the eye-bolts position, remove the bolts first.

2 Mount the wall brackets with the bolts to the wall.
   Match the location of the wall bracket and the eye-bolts on the rear of the TV.

3 Connect the eye-bolts and wall brackets tightly with a sturdy rope.
   Make sure to keep the rope horizontal with the flat surface.

CAUTION

- Make sure that children do not climb on or hang on the TV.

NOTE

- Use a platform or cabinet that is strong and large enough to support the TV securely.

Mounting on a wall

Attach a wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel.

LG recommends that wall mounting be performed by a qualified professional installer.

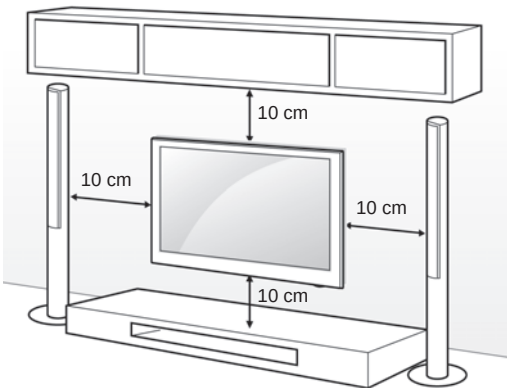

ENGLISH

Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

Separate purchase(Wall Mounting Bracket)

Model	50PT49** 50PZ85**	60PZ85**
VESA (A x B)	400 x 400	600 x 400
Standard screw	M6	M8
Number of screws	4	4
Wall mount bracket	PSW400B, PSW400BG, 	PSW600B, PSW600BG 

CAUTION

- Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized LG wall mount bracket and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mount bracket that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.

NOTE

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The length of screws may differ depending on the wall mount. Make sure to use the proper length.
- For more information, refer to the manual supplied with the wall mount bracket.

ENGLISH

Tidying cables

- Image shown may differ from your TV.

1 Install the **Power Cord Holder** and **Power Cord**. It will help prevent the power cable from being removed by accident.

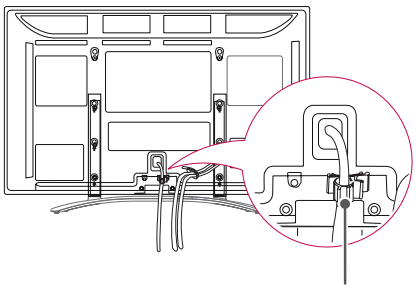

Power cord holder

2 Gather and bind the cables with the **Cable Holder**.

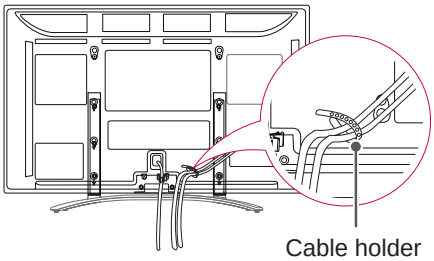

Cable holder

CAUTION

- Do not move the TV by holding the **Cable Holder** & **Power Cord Holder**, as the Cable holders may break, and injuries and damage to the TV may occur.

Attaching Pen Holder Bracket

- Image shown may differ from your TV.

1 You can attach the pen holder bracket in a convenient position for use as below.

NOTE

- Do not attach it to the power indicator, intelligent sensors, or the remote control's signal receiver.

ENGLISH

REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control to the remote control sensor on the TV.

To remove the batteries, perform the installation actions in reverse.

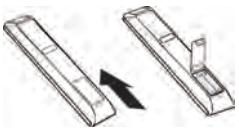

CAUTION

- Do not mix old and new batteries, as this may damage the remote control.

- Image shown may differ from your TV.

⏻(POWER)
Turns the TV on or off.

ENERGY SAVING (See p.70)
Adjusts the brightness of the screen to reduce energy consumption.

3D(Only 3D Models)(See p.52)
Used for viewing 3D video.

AV MODE (See p.31)
Selects an AV mode

INPUT (See p.31)
Changes the input source; Turns the TV on.

TV/RAD
Selects Radio, TV and DTV programme.

Number buttons
Enters numbers.

LIST (See p.26)
Accesses the saved programme list.

Q.VIEW
Returns to the previously viewed programme.

◿ + -
Adjusts the volume level.

MARK
Selects a menu or option.

FAV (See p.26)
Accesses your favourite programme list.

TOUCH (See p.36)
Uses Pentouch functions.

MUTE
Mutes all sounds.

P∧ ∨
Scrolls through the saved programmes.

PAGE
Moves to the previous or next screen.

GUIDE
Shows programme guide.

Home
Accesses the main menus, or saves your input and exit the menus.

Q. MENU (See p.33)
Accesses the quick menus.

Navigation buttons (up/down/left/right)
Scrolls through menus or options.

OK
Selects menus or options and confirms your input.

BACK
Returns to the previous level.

INFO (See p.27)
Views the information of the current programme and screen.

EXIT
Clears all on-screen displays and return to TV viewing.

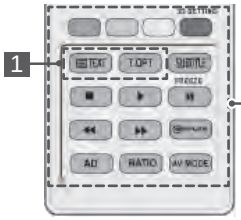

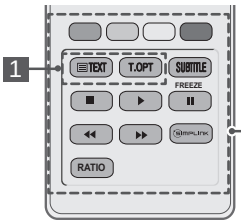

Coloured buttons
These buttons are used for teletext (on TELETEXT models only), Programme edit.

3D SETTING (Only 3D Models)
Use this to view 3D video.

1 **TELETEXT BUTTONS (**See p.91)
These buttons are used for teletext.
For further details, see the 'Teletext' section.

SUBTITLE
Recalls your preferred subtitle in digital mode.

Control buttons(■, ▶, II, ◀◀, ▶▶)
Controls the MY MEDIA menus, or the SIMPLINK compatible devices (USB,SIMPLINK).

FREEZE
Freezes the current frame while using the TV, AV, Component, RGB-PC, or HDMI input source.

SIMPLINK (See p.90)
Accesses the AV devices connected to the TV;
Opens the SIMPLINK menu.

AD
Switches the Audio Description On or Off.

RATIO (See p.29)
Resizes an image.

AV MODE (See p.31)
Selects an AV mode

WATCHING TV

Connecting an antenna

Connect an antenna to watch TV while referring to the following.
To prevent damage do not connect to the mains outlet until all connections are made between the devices.

Connect the TV to a wall antenna socket with an RF cable (75 Ω).

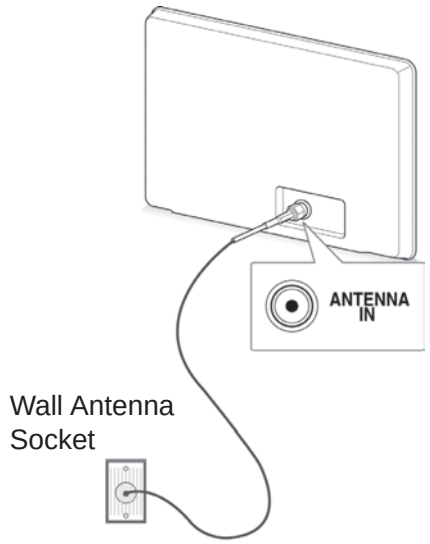

NOTE

- For optimum picture quality, adjust antenna direction.
- In poor signal areas, to achieve better picture quality it may be necessary to install a signal amplifier to the antenna.
- If the image quality is poor with an antenna connected, aim the antenna to the correct direction.
- An antenna cable and converter are not supplied.

Turning the TV on for the first time

When you turn the TV on for the first time, the Initial setting screen appears. Select a language and customize the basic settings.

1 Connect the power cord to a power outlet.

2 In Standby mode, press ⏻**(POWER)** to turn the TV on.

The Initial setting screen appears if you turn the TV on for the first time.

NOTE

- You can also access **Factory Reset** by accessing **OPTION** in the main menus.

3 Follow the on-screen instructions to customize your TV settings according to your preferences.

Language	Selects a language to display.
⇩	
Mode Setting	Selects **Home Use** for the home environment.
⇩	
Country	Selects a country to display. (Depending on model)
⇩	
Time Zone	Selects the time zone and daylight saving. (When Russia is selected for Country)
⇩	
Set Password	Set the password. (When France is selected for Country)
⇩	
Auto Tuning	Scans and saves available programmes automatically.

ENGLISH

NOTE

- For those countries without confirmed DTV broadcasting standards, some DTV features might not work, depending on the DTV broadcasting environment.
- When France is selected for Country, password is not ‘0’, ‘0’, ‘0’, ‘0’ but ‘1’, ‘2’, ‘3’, ‘4’.

4 When the basic settings are complete, press **OK**.

NOTE

- If you do not complete the Initial setting, it will appear whenever the TV turns on.
- Disconnect the power cord from the power outlet when you do not use the TV for a long period of time.

5 To turn the TV off, press ⏻(**POWER**).

Watching TV

1 In Standby mode, press ⏻(**POWER**) to turn the TV on.

2 Press **INPUT** and select **Antenna**.

3 To turn the TV off, press ⏻(**POWER**).
The TV switches to Standby mode.

Managing programmes

Automatically setting up programme

Selecting **Antenna**,

Use this to automatically find and store all available programmes.
When you start auto programming, all previously stored service information will be deleted.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Auto Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **Antenna** and press **OK**.

5 Select **Start** to start automatic tuning.
The TV scans and saves available programmes automatically.

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

NOTE

- If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned.
- You can store up to 1,000 programmes. The number of programmes that you can store differs depending on the broadcasting signal environment.
- **Automatic Numbering**: Decide whether to use the programme numbers as sent by broadcasting stations for tuning.
- When select **Italy** in the Country menu, if the pop up is displayed when the conflicted programme after Auto Tuning, select a broadcaster for conflicting programme number to solve.
- In the following country, DVB cable can be used : Germany, Netherlands, Sweden, Switzerland, Denmark, Austria, Finland, Norway, Slovenia, Hungary, Ukraine, Ireland, Poland, Romania, Spain, Bulgaria, Russia, Lithuania, Estonia, Latvia, Czech. (The supported country can be added.)
- In the following country, Digital TV can not be used : Bosnia, Kazakhstan.

ENGLISH

Selecting **Cable**,

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Auto Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **Cable** and press **OK**.

5 Press the Navigation buttons to scroll to **Comhem** or **Other Operators** and press **OK**.

6 Press the Navigation buttons to scroll to **Quick** or **Full** and press **OK**.

7 Press the Navigation buttons or Number buttons to scroll make appropriate adjustments (Except for Full mode) and press **OK**.

8 Select **Start** to start automatic tuning. The TV scans and saves available programmes automatically.

9 When you are finished, press **EXIT.** When you return to the previous menu, press **BACK**.

NOTE

- If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned.
- When you select the **Cable**, the **Cable Service Operator** selection screen can differ or not exist by the Cable situation of the applicable country.
- The popup window to select **Service Operator** is only shown initially for the 3 cases when you accessing the **Initial Setting** menu, when you change from **Antenna** to **Cable** or when you access the menu after changing the **Country**.
- When you want to select Service Operator aside from the above 3 cases, you can do so by selecting **Setup**->**Cable DTV Setting**-> **Service Operator**.

- Acquired certification SO : Sweden(Comhem, Canal Digital), Denmark(YouSee, Canal Digital, Stofa), Norway(Canal Digital), Netherlands(Ziggo, UPC Digitaal), Ukraine(Volia-Cable), Germany(KDG), Switzerland(CableCom, UPC), Austria(UPC Digital), Hungary(UPC Digital), Ireland(UPC Digital), Poland(UPC Digital), Romania(UPC Digital), Russia(OnLime)(The acquired certification SO can be added.)
- If there are not any Service Operator that you want, select **Other Operators**.
- If you select “**Other Operators**”, or the selected country supports “**Other Operators**” only, it may take some time to search all the channels, or it may not search some of the channels.
- If some of the channels do not appear, follow the steps below:

1. **SETUP** -> **Auto Tuning** -> **Cable** -> **Setting**
2. Switch Home Tuning from "**Off**" to "**On**"
3. Input additional values such as the frequency, symbol rate, modulation, and network ID. (You can ask your cable service provider for the above information.)

The following values are needed in order to search all available programmes quickly and correctly.
The commonly used values are provided as "default".
However, for correct settings, please inquire of the cable service provider.
When running **Auto Tuning** in DVB cable mode, selecting Full will search through all frequencies to find available channels.
In the case when the programme is not searched by selecting the Default, perform the searching by selecting the Full.
However, in the case when the programme is searched by selecting the Full, the Auto Tuning time can be taken too much.
If some channels are not detected when **Full** is selected, select the In detail checkbox and then try tuning again.

- **Frequency** : Enter a user-defined frequency.
- **Symbol rate** : Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a channel).
- **Modulation** : Enter a user-defined modulation. (Modulation: Loading of audio or video signals onto carrier).
- **Network ID** : Unique identifier allocated for each user.
- **Start Frequency** : Enter a user-defined start frequency range.
- **End Frequency** : Enter a user-defined end frequency range.

ENGLISH

Cable DTV Setting (In Cable mode only)

The range that a user can select from the Service Operator menu differs depending on number of Service Operator supported by each country, and if number of supported Service Operator for each country is 1, corresponding function becomes non-activation.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Cable DTV Setting** and press **OK**.

4 Press the Navigation buttons to scroll to **Service Operator** or **Channel Auto update** and press **OK**.

5 Select your desired Source.

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

- If you select **Cable**, you can see **Cable DTV Setting** menu.
- When **Channel Auto Update** is **On**, you can update information for all the programmes that can be updated, including the programme currently being watched.
- When **Channel Auto Update** is **Off**, you can only update information for the programme currently being watched.
- You can not select the **Cable DTV Setting** when the service operator is set to "**Ziggo**".

Manually setting up programme (In digital mode)

Manual Tuning lets you manually add a programme to your programme list.

Selecting **Antenna**,

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **DTV** and press **OK**.

5 Scroll through the programme types, and then add or delete programmes.

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

NOTE

- If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned.
- You can select **SBAND** when the country is set to "Norway, Latvia."

Selecting **Cable**,

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **Cable DTV** and press **OK**.

5 Make appropriate adjustments.

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

NOTE

- If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned.
- **Symbol rate** : Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a channel).
- **Modulation** : Enter a user-defined modulation. (Modulation: Loading of audio or video signals onto carrier).
- You can not select the **Cable DTV** when the service operator is set to "**Ziggo**" or "**Other Operators**" of Netherlands.

ENGLISH

Manually setting up programme (In analogue mode)

Manual Tuning lets you manually tune and arrange the stations in whatever order you desire.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **TV** or **Cable TV** and press **OK**.

5 Scroll through the programme types, and then add or delete programmes.

6 Press the Navigation buttons to scroll to TV System.

7 Press the Navigation buttons to scroll to **V/UHF or Cable**.

8 Press the Navigation buttons or Number buttons to scroll to the desired channel number.

9 Press the Navigation buttons to scroll to commence searching.

10 Press the Navigation buttons to scroll to **Store** and press **OK.**

11 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

NOTE

- If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned.
- **L** : SECAM L/L' (France)
- **BG** : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa)
- **I** : PAL I (U.K. / Ireland / Hong Kong / South Africa)
- **DK** : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
- To store another channel, repeat steps 5 to 10.

Assigning a station name

You can assign a station name with five characters to each programme number.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **TV or Cable TV**.

5 Press the Navigation buttons to scroll to **Name** and press **OK**.

6 Press the Navigation buttons to scroll Select the position and make your choice of the second character, and so on. You can use an the alphabet A to Z, the number 0 to 9, +/ -, and blank and press **OK**.

7 Press the Navigation buttons to scroll to **Close** and press **OK**.

8 Press the Navigation buttons to scroll to **Store** and press **OK**

9 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

ENGLISH

Fine Tuning

Normally fine tuning is only necessary if reception is poor.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.

4 Press the Navigation buttons to scroll to **TV or Cable TV**.

5 Press the Navigation buttons to scroll to **Fine**.

6 Fine tune for the best picture and sound.

7 Press the Navigation buttons to scroll to **Store** and press **OK**

8 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

Booster

(Depending on model)

If reception is poor select Booster to **On**.
When the signal is strong, select **Off**.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Booster** and press **OK**.

4 Select **On** or **Off**.

Editing your programme list

When a programme number is skipped, it means that you will be unable to select it using P ^, **v** button during TV viewing.
If you wish to select the skipped programme, directly enter the programme number with the NUMBER buttons or select it in the Programme edit menu.
This function enables you to skip the stored programmes.
You can change the programme number using “Move”function, if “Automatic Numbering” is unchecked when you start Auto Tuning.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **Programme Edit** and press **OK**.

4 Press the Navigation buttons to select a programme to be stored or skipped.

5 When you are finished, press **EXIT**.
When you return to the previous menu, press **BACK**.

ENGLISH

In DTV/RADIO mode

Skipping a programme number

1 Press the Navigation buttons to scroll to select a programme number to be skipped.

2 Press Blue button to turn the programme number.

3 Press Blue button to release.

NOTE

- When programmes are to be skipped, the skipped programme shows in blue and these programmes will not be selected by the P ∧ or ∨ buttons during TV viewing.
- If you wish to select a skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit or EPG.

Locking a programme number

1 Press the Navigation buttons to scroll to select a programme number to be locked.

2 Press Yellow button to turn the programme number.

3 Press Yellow button to release.

NOTE

- It can be registered as Lock programme even when **Lock System** is turned **Off**.

In TV mode

Deleting a programme

1 Press the Navigation buttons to scroll to select a programme number to be deleted.

2 Press Red button to turn the programme number.

NOTE

- The selected programme is deleted, all the following programmes are shifted up one.

Moving a programme

1 Press the Navigation buttons to scroll to select a programme number to be moved.

2 Press the Green button to turn the programme number and press the Navigation buttons.

3 Press Green button to release.

Skipping a programme number

1 Press the Navigation buttons to scroll to select a programme number to be skipped.

2 Press Blue button to turn the programme number.

3 Press Blue button to release.

NOTE

- When programmes are to be skipped, the skipped programme shows in blue and these programmes will not be selected by the P ∧ ∨ buttons during TV viewing.
- If you wish to select a skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit.

ENGLISH

Auto Sort

1 Press the Navigation buttons to start Auto Sort and press **OK**.

NOTE

- After activating Auto Sort once, you can no longer edit programmes.

Locking a programme number

1 Press the Navigation buttons to scroll to select a programme number to be locked.

2 Press Yellow button to turn the programme number.

3 Press Yellow button to release.

NOTE

- It can be registered as Lock programme even when **Lock System** is turned **Off**.

Selecting favourite programme

1 Press the Navigation buttons to scroll to select your desired programme.

2 Press the **FAV** to add corresponding programme to Favourite list of current Favourite group.

3 Press **FAV** to release.

Selecting favourite programme group

1 Press the Navigation buttons to scroll to select your desired programme.

2 Press the **Q.MENU** to display a pop-up window where Favourite group can be changed.

3 Press the Navigation buttons to scroll to select a Favourite group and press **OK**.

CI [Common interface] Information

- This feature is not available in all countries.

This function enables you to watch some encrypted services (pay services). If you remove the CI Module, you cannot watch pay services.
When the module is inserted into the CI slot, you can access the module menu.
To purchase a module and smart card, contact your dealer. Do not repeatedly insert or remove a CI module from the TV. This may cause a malfunction. When the TV is turned on after inserting a CI Module, you may not have any sound output.

This may be incompatible with the CI module and smart card.

CI (Common Interface) functions may not be possible depending upon the country broadcasting circumstances.

When using a CAM(Conditional Access Module), please make sure it meets fully the requirements of either DVB-CI or CI plus.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to **CI Information** and press **OK**.

4 Select the desired item: Module information, smart card information, language, or software download etc and press **OK**.

5 When you are finished, press **EXIT.**

NOTE

- This OSD is only for illustration and the menu options and screen format will vary according to the Digital pay services provider.
- It is possible for you to change CI (Common Interface) menu screen and service by consulting your dealer.

ENGLISH

Selecting the programme list

You can check which programmes are stored in the memory by displaying the programme list.

Displaying programme LIST

1 Press **LIST** to access the Programme List.

2 Press Blue button to turn the programme edit.

NOTE

- You may find some blue programmes. These have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the channel number shown in the programme LIST indicate there is no station name assigned.

Selecting a programme in the programme list

1 Press Navigation buttons to select programme.

2 Press **OK** to switch to the chosen programme number.

NOTE

- Press **TV/RAD. (**The mode will be switched between TV, DTV, and Radio from the programme you are currently watching.)

Paging through a programme list

1 Press the **P** ∧ ∨ buttons to turn the pages.

2 Press **LIST** to return normal TV viewing.

Displaying the favourite programme list

1 Press **FAV** to access the Favourite Programme List.

2 When you are finished, press **EXIT**.

Button	Description
Blue button	Turn the programme edit.
Yellow button	Current channel is registered/ cancelled as preferred channel on currently selected Group.
OK	Selects a programme to view
< or **>**	Favourite group is changed.

ENGLISH

EPG (Electronic Programme Guide) (In digital mode)

This system has an Electronic Programme Guide (EPG) to help your navigation through all the possible viewing options.
The EPG supplies information such as programme listings, start and end times for all available services. In addition, detailed information about the programme is often available in the EPG (the availability and amount of these programme details will vary, depending on the particular broadcaster).
This function can be used only when the EPG information is broadcast by broadcasting companies. You must set the Clock in the **Time** menu, before using EPG function.
The EPG displays the programme details for 8 days.

DTV 1 TV ONE
Pr. Change
Next
Watch
Good Morning
21:00
00:00
Show/Game Show
16:9
720p
HE-AAC
Sarah Bradley, Steve Gray and Brendon Pongia present the latest in fashion, the arts, entertainment, lifestyle and cooking, with regular and special guests.
Sarah Bradley, Steve Gray and Brendon Pongia present the latest in fashion, the arts, entertainment, lifestyle and cooking, with regular and special guests.
Up
Down

- Press **INFO** to show current programme information.

	Displayed with a TV or DTV Programme.
	Displayed with a Radio Programme.
MHEG	Displayed with a MHEG Programme.
HE-AAC	Displayed with a HE-AAC Programme.
4:3	Aspect ratio of broadcasting programme.
16:9	Aspect ratio of broadcasting programme.
	Displayed with a Teletext Programme.
	Displayed with a Subtitle Programme.
	Displayed with a Scramble Programme.
D	Displayed with a Dolby Digital Programme.
D+	Displayed with a Dolby Digital PLUS Programme.
576i/p, 720p, 1080i/p : Resolution of broadcasting programme	
	Broadcasted programme with the icon may not be displayed in Monitor Out depending on the information of the programme.

>	Shows next programme information.
∨ or ∧	Shows other programme information.

OK	A pop-up window for record/remind settings appear.
∧ ∨	Select Timer Record/Remind setting mode.

Switch on/off EPG

1 Press **GUIDE** to switch on or off EPG.

Select a programme

1 Press Navigation buttons or P ∧ ∨ to select desired programme.

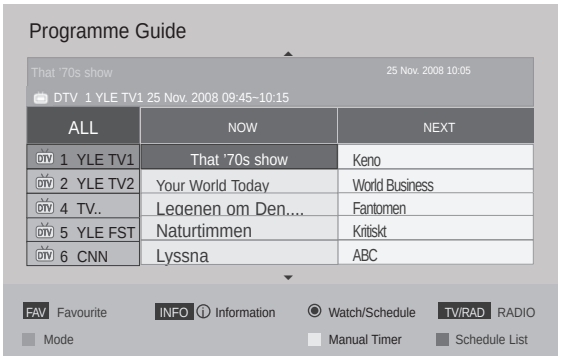

ENGLISH

NOW/NEXT Guide Mode

You can view a programme being broadcasted and one scheduled to follow.

Button	Description
Red button	Change EPG mode.
Yellow button	Enter Manual Timer mode.
Blue button	Enter Schedule List mode.
OK	When 'Now' is selected, it is moved to selected programme and EPG disappears When 'Next' is selected, a reservation pop-up window appears.
< >	Select NOW or NEXT Programme.
^ v	Select the Broadcast Programme.
P ^ v	Page Up/Down.
GUIDE	Switch off EPG.
BACK	
EXIT	
TV/RAD	Select DTV or RADIO Programme.
INFO	Detail information on or off.

8 Day Guide Mode

Button	Description
Red button	Change EPG mode.
Green button	Enter Date setting mode.
Yellow button	Enter Manual Timer mode.
Blue button	Enter Schedule List mode.
OK	When 'Currently broadcasting programme is selected, it is moved to selected programme and EPG disappears When 'Future broadcasting programme is selected, a reservation pop-up window appears.
< >	Select Programme.
^ v	Select the Broadcast Programme.
P ^ v	Page Up/Down.
GUIDE	Switch off EPG.
BACK	
EXIT	
TV/RAD	Select DTV or RADIO Programme.
INFO	Detail information on or off.

Date Change Mode

Button	Description
Green button	Switch off Date setting mode.
v	
BACK	
OK	Change to the selected date.
< >	Select a date.
GUIDE	Switch off EPG.
EXIT	

Extended Description Box

Button	Description
INFO	The detail information on or off.
^ v	Text Up/Down.
< >	Select Timer Record/Remind setting mode.
GUIDE	Switch off EPG.
EXIT	

Record/Remind Setting Mode

Sets a start or end time, programme for recording, and sets a start time, programme for the reminder with the end time grayed out.
This function is available only when recording equipment that use pin8 recording signalling has been connected to the Monitor Out(AV2) terminal, using a SCART cable.
Recording function is only supported in the Digital mode and not in the Analogue mode.

Button	Description
BACK	Switch off Manual Timer mode.
Yellow button	Change to Guide mode.
Blue button	Change to Schedule List mode.
OK	Save Timer Record/Remind.
< >	Select Type, Start Time, End Time or Programme.
^ v	Select Remind or Record function setting.

Schedule List Mode

If you've created a schedule list, a scheduled programme is displayed at the scheduled time even when you are watching a different programme at the time.

Button	Description
Yellow button	Change to Manual Timer mode.
Blue button	Change to Guide mode.
GUIDE	
OK	Select your desired Option (Modify/ Delete/Delete All).
^ v	Select programme.
P ^ v	Page Up/Down.
BACK	Switch off Schedule List.

Using additional options

Adjusting aspect ratio

Resize an image to view at its optimal size by pressing **RATIO** while you are watching TV.

NOTE

- You can also change the image size by pressing **Q. MENU** or accessing **Aspect Ratio** in the Picture menus.
- For Zoom Setting, select **14:9**, **Zoom** and **Cinema Zoom** in Ratio Menu. After completing Zoom Setting, the display goes back to Q.Menu.
- You can only select **4:3**, **16:9** (Wide), **14:9**, **Zoom/Cinema Zoom** in Component mode.
- You can only select **4:3**, Original, **16:9** (Wide), **14:9**, **Zoom/Cinema Zoom** in HDMI mode.
- You can only select **4:3**, **16:9** (Wide) in RGB-PC, HDMI-PC mode only.
- In DTV/HDMI/Component (over 720p) mode, **Just Scan** is available.
- In Analogue/DTV/AV/Scart mode, **Full Wide** is available.

- **16:9**: Resizes images to fit the screen width.

- **Just Scan**: Displays video images in the original size without removing parts at the edge of the image.

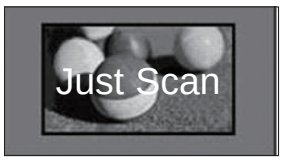

NOTE

- If you select **Just Scan**, you may see image noises at the edge of the original signal.

- **Original**: When your TV receives a wide screen signal it will automatically change to the picture format broadcasted.

ENGLISH

- **Full Wide**: When TV receives the wide screen signal, it will let you adjust the picture horizontally or vertically, in a linear proportion,to fill the entire screen fully.

  4:3 and 14:9 video is supported in full screen without any video distortion through DTV input.

- **4:3**: Resizes images to the previous standard 4:3.

- **14:9** : You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is moved to the up and down.

- **Zoom**: Enlarges an image to fit the screen width. The top and bottom of the image may not appear.

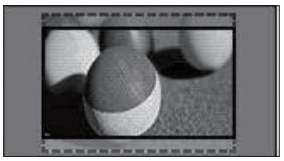

NOTE

- If you access, **Aspect Ratio** in the quick menus,
  - Press the Navigation buttons to stretch an image vertically.
  - Press the Navigation buttons to move the zoom focus up or down.

- **Cinema Zoom**: Enlarges an image in the cinemascope ratio, 2.35:1.
  - To change the ratio of the cinema zoom, press the Navigation buttons and its range is from 1 to 16.
  - To move the zoom focus up or down, press the Navigation buttons.

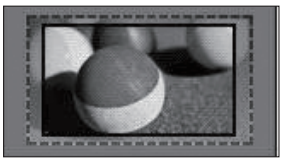

NOTE

- If you enlarge or reduce an image, the image may be distorted.

Changing AV modes

Each AV mode has the optimized image and sound settings.
Press **AV MODE** repeatedly to select an appropriate mode.

Mode	Description
Off	Changes to the previously customized settings
Cinema or **THX Cinema**	Use the optimized image and sound settings for the cinematic look
Sport	Use the optimized image and sound setting for dynamic action sports
Game	Use the optimized image and sound settings for fast gaming When playing a video game using PlayStation or Xbox, it is recommended to use the **Game** mode. When in **Game** mode, functions related to picture quality will be optimized for playing games.

NOTE

- If you select **Off** in AV mode, the picture and image which you initially set will be selected.

Using the input list

Selecting an input source

1 Press **INPUT** to access the input sources.
- The connected device displays on each input source.

NOTE

- You can also access the input source list by selecting **INPUT** in the main menus.

2 Press Navigation buttons to scroll to one of the input sources and press **OK**.

- Image shown may differ from your TV.

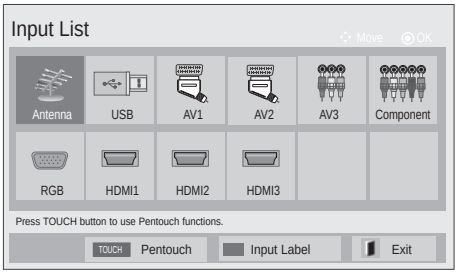

Input source	Description
Antenna or **Cable**	Select it when watching the DTV/RADIO/TV.
USB	Select it when using USB depends on connector.
AV	Select it when watching the VCR or external equipment.
Component	Select it when using the DVD or the Digital set-top box depends on connector.
RGB	Select it when using PC depends on connector.
HDMI	Select it when using DVD, PC or Digital set-top box depend on connector.

The connected input sources display in black and the disconnected input sources in grey.
- To add an input label, press the Blue button. You can easily identify a device connected to each input source.

-To access the Pentouch, press the TOUCH button. Various Pentouch functions are available on the TV.

ENGLISH

Adding an Input label

Add a label to an input source so that you can easily identify a device connected to each input source.

- Image shown may differ from your TV.

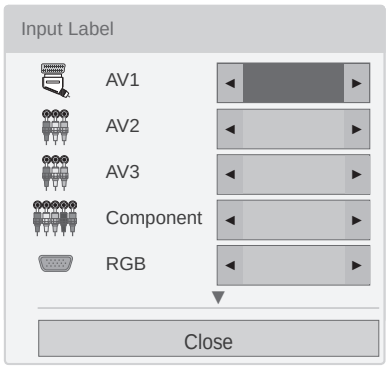

1 Press **INPUT** to access the input sources.

2 Press the **Blue** button.

3 Press the Navigation buttons to scroll to one of the input sources.

4 Press the Navigation buttons to scroll to one of the input labels.

5 When you are finished, press **EXIT**.
When you return to the previous menu, press **BACK**.

NOTE

- This function is not supported in Pentouch mode.

Locking the buttons on the TV (Child Lock)

Lock the buttons on the TV to prevent any unwanted operations or accidents by children.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **LOCK** and press **OK**.

3 Press Navigation buttons to scroll to **Key Lock** and press **OK**.

4 Select **On** to activate the Key lock feature.

- To deactivate the Key lock feature, select **Off**.

5 When you are finished, press **EXIT**.

When you return to the previous menu, press **BACK**.

NOTE

- The TV is programmed to remember the last setting after you turn the TV off.
- If you turn the TV off with the **Key Lock** feature activated, press the ⏻, **INPUT**, **P** ∧ ∨ or Number buttons on the remote control.
- If you press any button on the TV with the Key lock feature activated, **Key Lock** appears on the screen.

Using the quick menu

Customize the frequently using menus.

1 Press **Q. MENU** to access the quick menus.

2 Press Navigation buttons to scroll through the following menus and press **OK**.

- Image shown may differ from your TV.

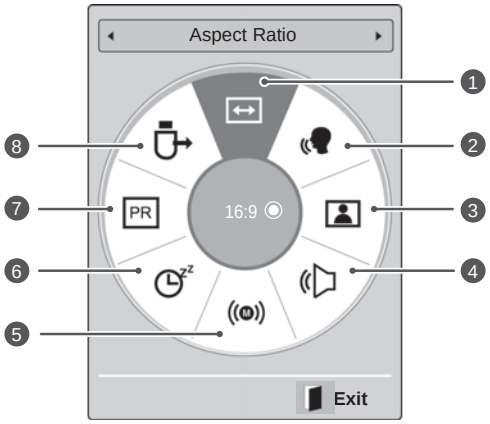

	Menu	Description
❶	**Aspect Ratio**	Changes the image size (16:9, Just Scan, Original, Full Wide, 4:3, 14:9, Zoom, Cinema Zoom)
❷	**Clear Voice II**	By differentiating the human sound range from others, it helps users listen to human voices better.
❸	**Picture Mode (Depending on model)**	Changes the image mode (Vivid, Standard, APS, Cinema, IHX Cinema, IHX Bright Room, Sport, Game, Photo, Expert1, Expert2)
❹	**Sound Mode**	Changes the sound mode (Standard, Music, Cinema, Sport, Game)
❺	**Audio** or **Audio Language**	Changes the sound output.
❻	**Sleep Timer**	Sets the length of time until the TV to turns off
❼	**Skip Off/On**	Sets the Skip Off/On.
❽	**USB Device**	Ejects a USB device when a USB device is connected

NOTE

- The available menus and options may differ from the input source that you are using.

3 Press Navigation buttons to scroll to the option you want.

4 When you are finished, press **Q. MENU.**

ENGLISH

Using the customer support

Testing Software Update

To download software through the digital terrestrial broadcasting system.

1 Press **Home** to access the main menus.

2 Press the Red button to scroll **Customer Support**.

3 Press the Navigation buttons to scroll **Software Update.**

4 Press the Navigation buttons to scroll to **On** and press **OK**.
- If you select **On**, a user confirm message box will be displayed to notify that new software is found.

5 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

When setting **“Software Update”**

- Occasionally, a transmission of updated digital software information will result in the following menu on the TV screen.

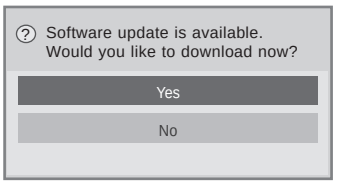

- Simple Update : for current update stream

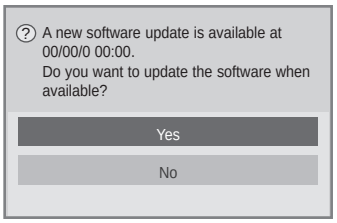

- Schedule Update : for scheduled update stream
- When the Software Update menu is “**Off**”, the message to change it to “**On**” appears.
- Download starts when "**Yes**" is selected. At this time, progressing pop-up window does not display.
- Download progress status can be checked from Software Update menu.

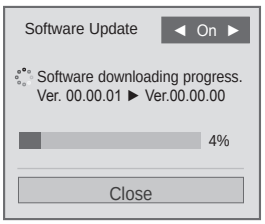

- TV is restarted when download is completed.

NOTE

- During Progress of a **Software Update**, please note the following:
  - Power to the TV must not be interrupted.
  - The antenna must not be disconnected.
  - After **Software Update**, you can confirm the updated software version in Software Update menu.
  - It may take hours to download the software, so make sure that the power stays on during the download.
  - The software is downloaded only in Standby mode or in MUX with Software Update Service, and stops when the power cord is unplugged or when viewing MUX without Software Update Service.
  - When you return to Standby mode or MUX with Software Update Service, the software download will resume from where it stopped.

Testing the Picture / Sound

To execute picture and sound tests.

1 Press **Home** to access the main menus.

2 Press the Red button to scroll **Customer Support**.

3 Press the Navigation buttons to scroll **Picture Test** or **Sound Test**.

4 Press the Navigation buttons to scroll to **Yes** and press **OK**.

5 When you are finished, press **EXIT**.
When you return to the previous menu, press **BACK**.

Using Signal Test

To view information on the Manufacturer, Model/ Type, Serial Number and Software Version.

1 Press **Home** to access the main menus.

2 Press the Red button to scroll **Customer Support**.

3 Press the Navigation buttons to scroll **Signal Test.**

4 Press **OK**.
- Manufacturer, Model/Type, Serial Number, Software Version and information of Channel.

5 When you are finished, press **EXIT**.
When you return to the previous menu, press **BACK**.

NOTE

- This displays the information and signal strength of the tuned *MUX.
- This displays the signal information and service name of the selected MUX.
(*MUX: A higher directory of channels in digital broadcasting (a single MUX contains multiple channels.))

Using the product or service information

To check the product or service information

1 Press **Home** to access the main menus.

2 Press the Red button to scroll **Customer Support**.

3 Press the Navigation buttons to scroll **Product/ Service Info.**.
You can check the various product/Service infomation based on your model.

4 When you are finished, press **EXIT**.
When you return to the previous menu, press **BACK**.

ENGLISH

PENTOUCH

Using Pentouch

Pentouch allows you to use touch pen supported features like Sketchbook, Photo Editor, Family Diary, Gallery, Internet and My Office.

WARNING

- Do not drop or throw the touch pen.Do not swing the touch pen with the charging cable connected to it. This can damage the product or cause personal injury.
- For people using pacemakers, the distance between the touch pen and the pacemaker should be at least 30 cm. Never use it where wireless communication is prohibited. Protect it from extreme vibrations or magnetic objects.Wireless communications can cause malfunctions or failures.
- Do not use or store the touch pen in direct sunlight, near a hot object (e.g., a heater or fireplace), or in dusty or high-humidity environments.This can result in product deformation, malfunction, failure, or fire.
- If abnormal sound, smoke, or odor is detected, immediately remove the charging cable and stop using the product. Contact a service center. This can cause failures or fire.
- If fluid leaks from the touch pen, do not touch the fluid with bare hands. If fluid comes into contact with eyes, immediately rinse eyes with abundant tap water, then consult a doctor. The fluid can cause blindness. If the fluid comes into contact with skin or clothing, immediately wash it off with tap water. If the fluid causes skin inflammation or injury, consult a doctor.
- Do not allow the fluid to come into contact with fire. Do not heat the product in a microwave or convection oven.
- Use the specified USB cable when charging the battery.
- Keep the touch pen out of reach of children and away from unstable locations. Do not let children or pets put the touch pen in their mouths or lick the touch pen. Playing with or swallowing it may cause serious injury.
- Do not use the touch pen with wet hands. Do not let foreign substances (e.g., soft drinks or water) enter the touch pen; if this happens, do not use the touch pen. Do not touch the optic receiver of the touch pen with a sharp object. This can result in electrical shock or damage the product.
- Do not use the product under extreme temperature conditions. Do not use the product immediately after going from the cold outdoors to the warm indoors. This can cause condensation in the pen. * This can result in damaging the product. Turn off the power and wait several hours until the moisture evaporates before using the product.
- Never disassemble or modify the touch pen. * The product warranty does not cover damage or injury caused by unauthorized disassembly. This can result in electrical shock or damage the product.
- If fluid leaks from the touch pen, the use of fire in the vicinity is strictly prohibited. The leaked fluid or gas can ignite a fire or cause damage.
- Avoid extreme shocks or impacts to the product, for example, placing a heavy object on it or pressing it.
- Do not display fixed characters or images on the screen for extended periods of time. This can cause image sticking.
- Do not connect the charging cable to peripheral devices or disks that are not specified. This can cause malfunctions or failures.
- Do not leave the touch pen on the floor. Stepping on it can damage the product or cause personal injury. Use the pen holder provided with the touch pen.
- Be careful when disposing of the product. The touch pen consists of a lithium-ion battery and plastic material. Burning can be dangerous, so dispose of it according to local regulations.
- Do not remove the charging cable using excessive force. This could damage the

charging port and PC.
- Do not handle the touch pen with excessive force. If you use the touch pen with excessive force, you may leave foreign substances on the screen. Clean the product with the product cleaning cloth provided.
- When multiple people use the touch pen, make sure that sufficient space is available. Collisions can cause injury or failures.

Step of using the Pentouch program

Follow the steps below to use the Pentouch function.

1 Check the system requirements before installation.

2 Install the Pentouch program and the USB dongle driver from the installation CD.

3 Pair the pen and the dongle.

4 Connect the PC and the TV.

5 Configure the PC screen.

6 Activate the Pentouch mode on the TV.

7 Start the Pentouch program.

System Requirements

Make sure that the drivers are installed properly to allow proper operation of the touch pen.

- Windows 7 Starter Edition is not supported.

Supported Operating System	
Windows XP	32 bit
Windows Vista Windows 7	32 bit
	64 bit

Recommended System Requirements for Pentouch

- CPU: Dual-Core 2GHz or better
- Memory: 1GB or more
- HDD: 500MB or more
- Display: Graphics card with 1920x1080 (Except for 50PT49**), 1024x768 HD(Only 50PT49**)via an RGB or HDMI output port
- Windows 7 is recommend due to its support of multi-touch.

NOTE

- You must log in as an administrator to install or remove the included software.
- Make sure to install the drivers found on the CD provided.
- You can also download this program from the LG Electronics website.
- Make sure to close all running applications before installing the drivers.

Installing the Pentouch Program

Install the Pentouch program on your computer to use its various functions.
Follow the steps described in this manual to install the program.

1 Prepare your computer and start it.

2 After the computer starts, Insert the supplied CD . The installation screen appears automatically.

(If the installation screen is not displayed automatically, access My computer and then click LG and index.htm to view the installation screen.)

3 Click [Install the Pentouch Program] on the web page. Selects a language to display, and then Install the Pentouch program.

The default folder is used for installation.

A window appears to indicate that the installation was completed successfully.

4 Install the USB dongle driver after installing the Pentouch program.

ENGLISH

Installing the USB Dongle Driver

Install the Pentouch program before installing the USB dongle driver.

1 Click [Install the Pentouch USB Dongle Driver] on the web page. Selects a language to display, and then Install the Pentouch USB Dongle Driver.

The default folder is used for installation.

A window appears to indicate that the installation has completed successfully.

2 In Windows XP, the [Found New Hardware Wizard] installs your driver automatically.

3 Restart your computer after the installation.

4 If the computer turns on normally, register your touch pen and Pentouch dongle to your computer.(See p.39)

NOTE

- Disconnect the USB dongle first to install the driver.

Removing the Pentouch Program and Driver

If there is a problem with the Pentouch program or driver installation or if an error occurs while using the program, follow the steps below to remove the program or driver, and then reinstall them.

1 On your computer, select [Start] → [Control Panel] → [Add/Remove Programs] to remove the Pentouch programme or driver.

- The installed driver: LG Pentouch Multi-touch Driver
- The installed Pentouch program: Pentouch TV

2 Click [Yes]. A window appears telling you that the program/driver has been removed.

3 Please reboot your PC after removing the program or the driver.

Pairing between Touch Pen and Dongle

What is Pairing?

You need to pair the touch pen and the dongle before using the touch pen.
Once paired, you do not need to pair them again unless you:

- Bought a new pen
- Replaced the old pen with a new one
- Attempt to pair a new touch pen for using two pens simultaneously

Things to Know Before Pairing

- This program allows pairing of up to two pens and one dongle.
- If you want to use two pens simultaneously, they must be paired with your dongle one at a time.
- Pairing is not possible if a paired pen is currently in use.
- If you pair a new touch pen when two pens have already been paired with your dongle, all the previous pairing data is deleted.
- Please use the installation CD provided to install the driver on your PC. (For more information on driver installation, see the Driver Installation Guide.)

<Computer Rear Panel>

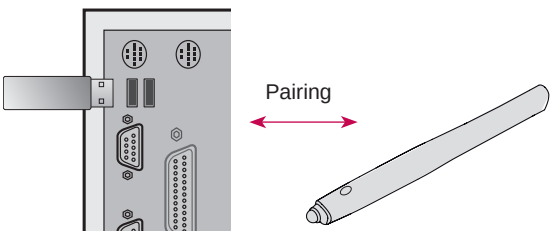

Touch Pen

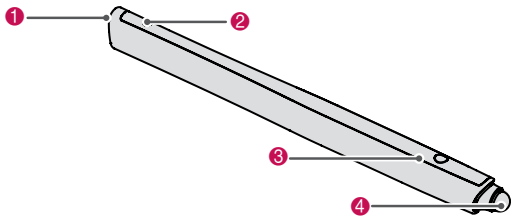

No.	Description
1	USB charging port
2	LED indicator
3	Power / Home button
4	Touch pen tip switch

Dongle

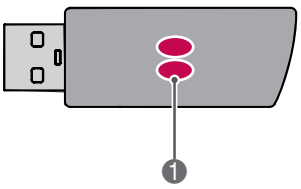

Indicator LED

NOTE

- For more information, please refer to the user manual(Touch Pen,Dongle).
- Touch pens and dongles are sold separately at LG Electronics stores.
- When you leave your touch pen unused for a certain period of time (10 minutes), the pen automatically powers off.

Pairing for the First Time

1 Insert the Pentouch dongle into the USB port. Windows will then display a message in the taskbar, indicating that drivers are being searched and installation is in progress. When the installation is complete, the two LED indicators on the USB dongle will turn red. When you can see a message indicating that the new device has been installed, prepare the touch pen provided as an accessory.

ENGLISH

2 Keep the touch pen within 50 cm of the dongle. Press the ⏻ /Home button on the touch pen once. The LED indicator on the touch pen will turn red for 2 seconds and blink green 3 times when pairing is complete.

3 Once the touch pen is paired, the red LED will blink once when you press the ⏻ /Home button.

NOTE

- Pairing is required only when using the touch pen for the first time. Next time you want to use the touch pen, insert the Pentouch dongle first. If the two indicators turn red, press the ⏻ /Home button.

When Pairing Fails

1 Pairing fails if the dongle driver is not installed on the computer.

2 Pairing fails if the LED indicator on the dongle is not red.

3 Remove the dongle from the PC, reinsert it and try pairing.

Unpairing (Resetting touch pen)

1 Press the ⏻ /Home button on the touch pen and check that the red LED blinks once.

2 Press and hold the ⏻ /Home button on the touch pen for 9 to 10 seconds.

3 When the green light blinks once, release the button. The red light blinks 3 times and the pen is then in its initial state (unpaired).

Caution When Unpairing

1 Be careful not to unpair the pen by mistake. If unpaired, try pairing it again.

2 If you unpair and pair a normally functioning touch pen, the other paired pen may not work. In this case, unpair the nonfunctioning touch pen and pair it again by following the steps described in the Pairing for the First Time section.

Touch pen Operation

Once paired, you can use the touch pen in the following ways.

1 Powering on
- Press the ⏻ /Home button once. The red and green LEDs will remain lit to indicate that the power is on.

2 Powering off
- Press and hold the ⏻ /Home button. When the red LED turns on once briefly and once again, release the button. The red LED blinks 3 times and the pen is then powered off.

3 Pressing the ⏻ /Home button while using the touch pen
- In the Pentouch program: Shows or hides the toolbar of the feature.
- In Windows: Works in the same way as the right-click function. Point the touch pen at an object you want to right-click, then press the button.

4 The double-click function may not work as intended in Windows XP or Windows Vista. If this is the case, use the ⏻ /Home button (right-click) instead.

5 The touch pen works in the same way as the mouse in Windows.

NOTE

- After 3 hours of a continuous charge, you can use the touch pen for about 8 hours.
- Pentouch operation may not be normal while charging.
- Green LED will be turned on during using touch-pen. If you don't use touch-pen, it will be automatically turned off after 1 minute.
- Touch pen LED indicator for battery status
  - Charging: Red LED
  - Charging complete: Green LED
  - Battery level 20% or less: Red LED blinks every 3 seconds
  - No battery power: Red LED blinks every second and powers off automatically.

ENGLISH

Using the Pentouch Function

• Image shown may differ from your TV.

You need the following items to use the Pentouch functions:

- Computer with RGB or HDMI output
- RGB or HDMI cable

1 After connecting the TV and the PC with an RGB cable or an HDMI cable, use the INPUT button on the remote controller and select the input connected to the PC.

2 Configure your PC screen by referring to the Display Resolution Setting for Pentouch section. If your PC is a notebook computer, you should configure the video to be displayed only on the TV and not on the PC screen.

3 Enter the Pentouch mode on your TV.

- Press **TOUCH** button on the remote control or **Home** to access the main menus. Then choose Pentouch function.

4 Select the correct computer input connection to enter the Pentouch mode.

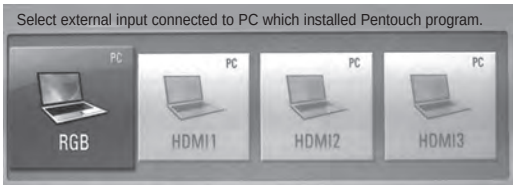

5 Use the touch pen or the mouse to start the Pentouch program. Pressing the ⏻ /Home button on the touch pen works in the same way as right-clicking the mouse.

NOTE

- If you turn off the TV and turn it back on while using the Pentouch function, the last screen on which you were working appears.
- To switch from Pentouch mode to others mode, either press the INPUT button on the remote control to select the desired input or press the TV button to return to the TV viewing screen.

Display Resolution Settings for Pentouch

On a Desktop Computer

In Windows XP

Right-click the desktop and select [Properties]. In the [Display Properties] window, set the screen resolution to 1920x1080(Except for 50PT49**), 1024x768 (Only 50PT49**) under the [Settings] tab.

In Windows Vista

Right-click the desktop and select [Personalize] and [Display Settings]. Set the screen resolution to 1920x1080(Except for 50PT49**), 1024x768 (Only 50PT49**)in the [Resolution] section.

In Windows 7

Right-click the desktop and select [Screen Resolution]. Set the screen resolution to 1920x1080(Except for 50PT49**), 1024x768 (Only 50PT49**) in the [Resolution] section.

On a Laptop Computer

Method 1:

On your laptop, press the "Fn + switch screen" key on the keyboard to display the computer screen on your TV screen, then set the computer's display resolution to 1920x1080 (Except for 50PT49**), 1024x768 (Only 50PT49**).
* Note: The switch screen key of the laptop may be subject to change by the manufacturer.
* The PC screen must only be displayed on the TV.

LG	Samsung	HP	Toshiba
Fn+F7	Fn+F4	Fn+F5	Fn+F5
Sony	Acer	Dell	Lenovo
Fn+F7	Fn+ F5	Fn + F8	Fn + F7

ENGLISH

Method 2:

Open the control panel for the graphics card on your computer.
Set [Display Mode] to the [Single Display] mode, then select [LG TV] as the display to use.
* Set the computer's display resolution to 1920x1080 (Except for 50PT49**), 1024x768 (Only 50PT49**).

NOTE

- The method of changing display resolution settings may vary according to the computer's configuration.
- Pentouch does not support dual monitor mode or duplicate (mirror) monitor mode. Check that the PC screen is set to only be displayed on the TV.
- The switch screen key of the laptop may be subject to change by the manufacturer.

Viewing the Screen Settings

- Image shown may differ from your TV.

If you press the OK button on the remote control, the screen shown below appears to indicate that the screen settings have been updated successfully.

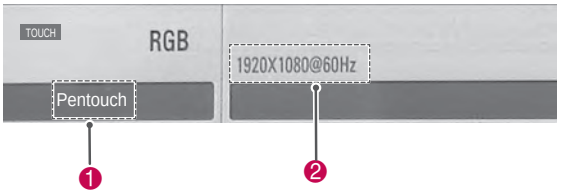

- ❶ The text "Pentouch" should be displayed to indicate that the Pentouch mode is activated. If not, restart the Pentouch mode.(See p.41)
- ❷ "1920x1080(except for 50PT49**) and 1024x768 (only 50PT49**) " should be displayed to indicate that the resolution has been set successfully. If not, set the monitor resolution again.(See p.41)

CAUTION

- The double-click function may not work as intended in Windows XP and Vista because these operating systems do not use touch drivers.
- The Pentouch operation may become slow depending on the computer's performance.
- The screen size may change if you disconnect the computer's output port and connect it again. If this happens, set the computer resolution again.
- If nothing is shown on the TV and the laptop screen when you press the switch screen key (Fn + manufacturer-specified key), try pressing the key again.
- The TV screen size may become smaller when you press the switch screen key (Fn + manufacturer-specified key). If this happens, adjust the resolution again.
- Changing the desktop icon properties in Windows 7 may affect the Pentouch program.
- It is recommended not to run other applications while using the Pentouch program.
- If the point you touch on the TV screen using the touch pen and the point indicated as touched on the computer screen do not match when the computer and TV are connected by a PC signal (RGB) cable, use the TV remote control to select [Home] → [PICTURE] → [SCREEN] (RGB), then select [Auto Configure] to adjust the screen.
- If the PC and TV are only connected by a PC (RGB) signal cable, there will be no sound from the TV. Please connect the PC and the TV with a PC audio cable as well.
- The Play Video function in Photo Editor may not work as intended, depending on the codecs installed on your computer.
- If you want to open programs with a single click in Window XP or Vista, On your PC, go to Start →Control Panel → Folder Options and select "Single-click to open an item (point to select)."
- If your PC is running Windows XP, the virtual keyboard will only support English.
- When changing to the Pentouch mode, or when changing the resolution in Pentouch mode for RGB input signals, images may not be displayed properly for a while due to auto adjustment.

Checking the Pentouch Functions

- Image shown may differ from your TV.

You see the home screen shown below when you start the Pentouch program.

1 Press **TOUCH** to access the pentouch functions.

NOTE

- You can also access the pentouch functions by selecting **Pentouch** in the main menus.

2 Touch the screen with the touch pen to select **Sketchbook**, **Photo Editor**,**Family Diary** , **Gallery**, **Internet** or **My Office**.

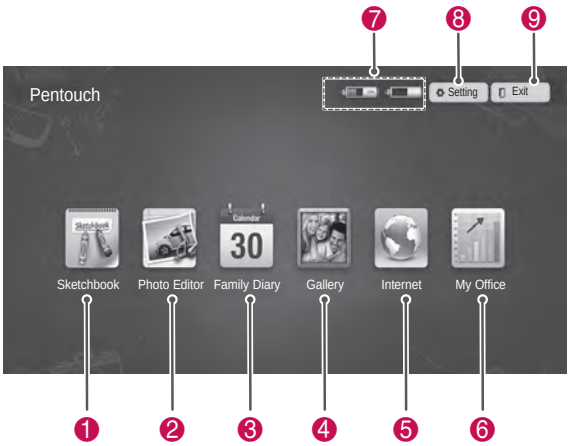

No.	Description
❶	**Sketchbook** Select the background you want, then draw pictures on it.
❷	**Photo Editor** Draw or edit pictures on photos and videos.
❸	**Family Diary** A journal of photos, videos, notes, and sketches for family events by date.
❹	**Gallery** A collection of pictures drawn and saved in Sketchbook ,Photo Editor, internet and My Office.
❺	**Internet** Launch the Web browser to capture the Web content, then draw or write memos on it.
❻	**My Office** Supports the glass effect in Microsoft Office and PDF files.
❼	Touch pen battery level
❽	Saving and opening folder location, screen saver and language settings
❾	Quit the Pentouch program.

ENGLISH

When you select the **Setting,**

1 Select **Setting** from the Pentouch Home screen with the touch pen.

2 Select the desired option.

Option	Description
Open Folder	Select a folder from which you will open photos or video files.
Save Folder	Select a folder to which you want to save images.
Screensaver	Select the standby time for the screensaver.
Language	Select and change the language you wish to work in.

Using Toolbar

You can use the draw toolbar on all menu screens.

Display the toolbar by pointing the touch pen at the bottom of the screen.

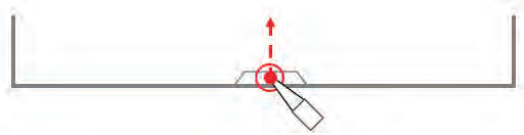

There are two types of toolbars: fixed and specialized.

- The fixed toolbar provides the functions used for all menus.
- The specialized toolbar provides the functions used for a specific menu.

Fixed Toolbar Functions

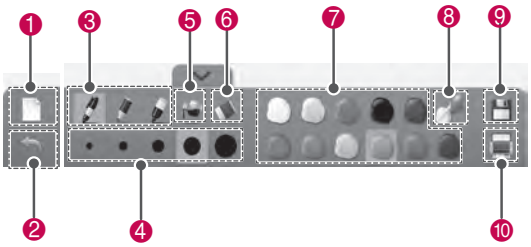

No.	Description
❶	Reset: Remove the background and all the drawings.
❷	Undo: Undo up to 5 recent actions.
❸	Drawing tools: Ink pen, highlighter pen, magic pen.
❹	Select the thickness of the current drawing tool.
❺	Paint bucket: Fill a closed area with the selected colour.
❻	Eraser
❼	Colour selector: Select a colour for the current drawing tool.
❽	Free color selector: Select any colour from the colour wheel.
❾	Save
❿	Print Set the printer, print range and number of copies. Preview is also available.

* Descriptions for the specialized toolbar functions are provided in the menu function description section.

CAUTION

- Eraser function could be slower if drawing objects are overlapped exceed program performance depends on PC environment.

Using Sketchbook

You can select the background you want, then draw pictures on it.

1 Touch the screen with the touch pen to select Sketchbook.

2 Touch the screen with the touch pen to select the desired option or use the toolbar to draw a picture.

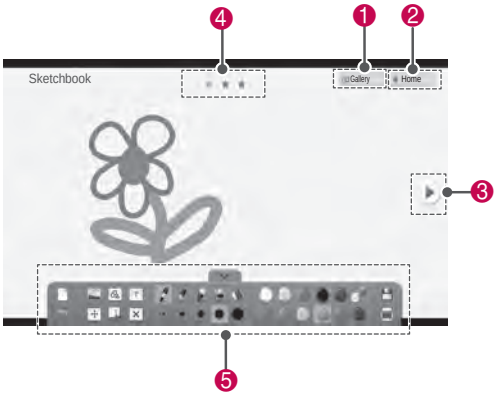

No.	Description
❶	Enter Gallery.
❷	Enter the Pentouch Home menu.
❸	**Page buttons** Select them to go to the previous page or next page. You can move up to 3 pages.
❹	Current page position
❺	Toolbar functions

Specialized toolbar functions

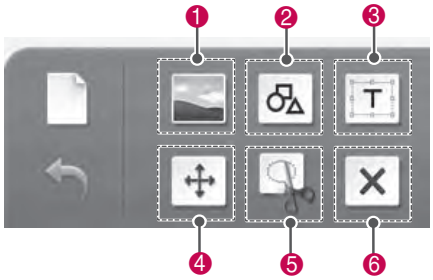

Menu	Description
❶	Select image for background.
❷	Insert basic figures. Select the desired icon, then short tap to create a default size figure.
❸	Insert text. If you select an area to enter the text, a keyboard will be displayed on the screen. For some operating systems, two virtual keyboards may be displayed.

ENGLISH

❹	When dragging a line, pen or shape, you can only move or resize a single object at a time. If you short tap an object and drag, the area of the selected object will be displayed. Move You can move an object by dragging the area of the selected object. 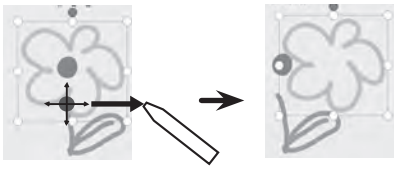 Expansion / Reduction You can expand or reduce an object by dragging one of the 8 corners of the selected object. The object will be resized based on the corresponding corner/edge. 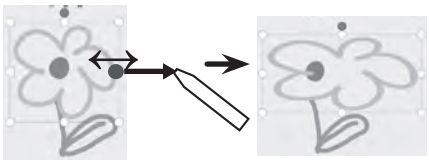 Rotation Drag in rotation to rotate the selected object. 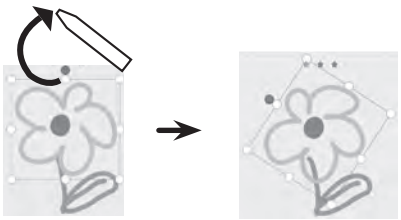
❺	Cut the range and Move / Expansion / Reduction / Rotation. 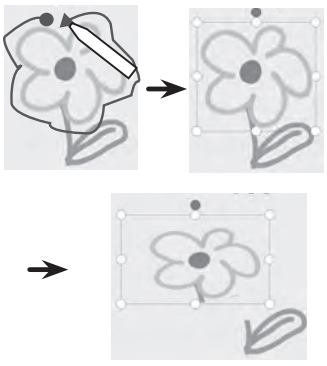

❻	Delete object from the screen. 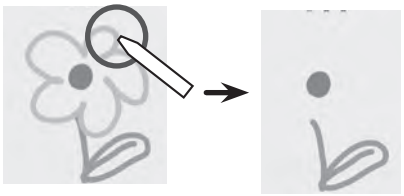

Using Photo Editor

You can draw or edit image on photos and video capture images.

1 Touch the screen with the touch pen to select **Photo Editor**.

2 Touch the screen with the touch pen to select the desired option.

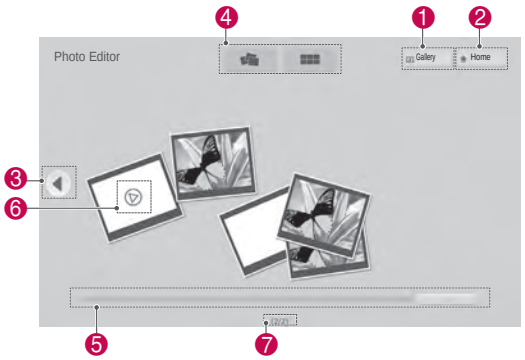

No.	Description
❶	Enter Gallery.
❷	Enter the Pentouch Home menu.
❸	**Page button** Select them to go to the previous page or next page.
❹	Select photo list view option. (Scattered view /Sorted view)
❺	Page navigation scrollbar
❻	**Video indicator icon** Only one video can be played at a time; the previously playing video is paused.
❼	Display number of pages.

3 Select the photo or video you wish to decorate. You can decorate the photo with the toolbar.

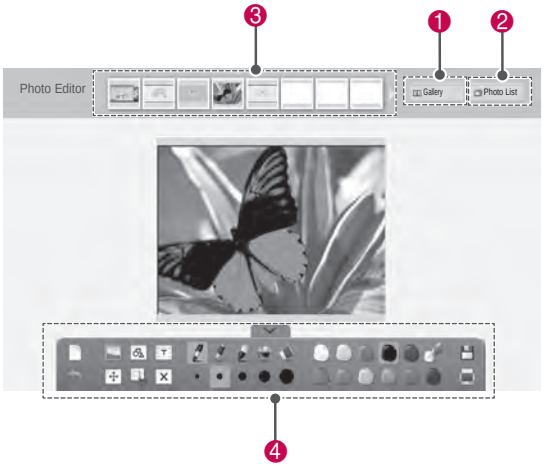

No.	Description
❶	Enter Gallery.
❷	Open Photo list
❸	Previews of all photos and videos in the folder are shown here. (from new to old)
❹	Toolbar functions

NOTE

- When working with a video, you can use the pause button and extract the image of the paused frame to use it in Photo Editor.
- You can edit the photos or videos stored in the **Photo List**.
- The TV may not properly play the video files in the Pentouch mode depending on your computer.

Specialized toolbar functions

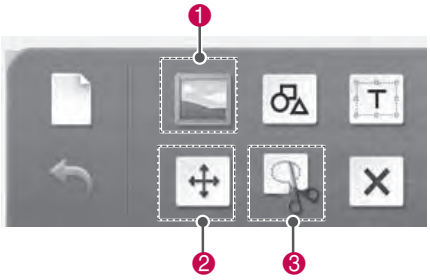

ENGLISH

No.	Description
❶	Frame for image. 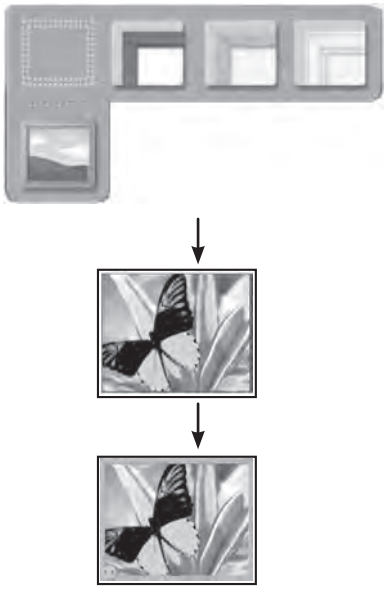
❷	Move an object. If you select an object, a mini pop-up window will display.
	Bring to Front.
	Send to Back.
	Delete.
❸	Cut from the image. After select area to cut, you can change it's size.

Using Family Diary

You can keep a journal of photos, videos, notes, and sketches for family events by date.

1 Touch the screen with the touch pen to select **Family Diary**.

2 Select the desired date with the touch pen.

3 Use the toolbar to create and decorate the family diary.

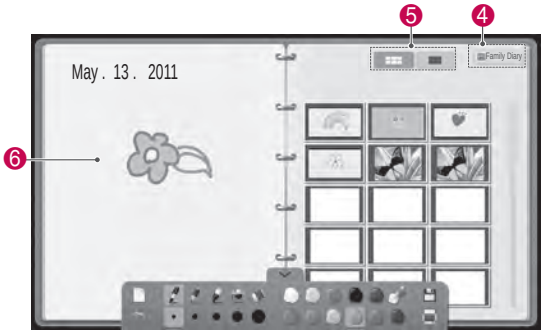

No.	Description
1	Enter the Pentouch Home menu.
2	Select date.
3	Dates with images are shown with colours and icons.
4	Open the Family diary screen.
5	Select Preview or Full Screen.
6	Draw or write here.

Using Gallery

This is the gallery of the images you made and saved using Sketchbook, Photo Editor, Internet and My office.

1 Touch the screen with the touch pen to select **Gallery.**

2 Touch the screen with the touch pen to select the desired option, and enjoy the Gallery screen.

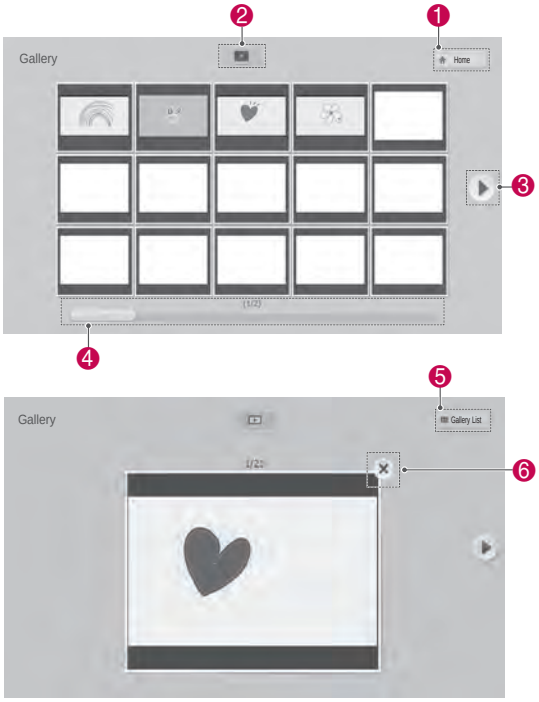

No.	Description
1	Enter the Pentouch Home menu
2	Start slideshow from the first image on the current page. To stop the slide show, touch the screen while the slide show is playing with the touch pen. This will take you back to the previous screen.
3	Page button: Select them to go to the previous page or next page.
4	Page navigation scrollbar
5	Enter the Gallery List
6	When selected, the current image is deleted and the next image is displayed.

ENGLISH

Using the Internet Function

You can capture Web content to draw or write memos on it.

1 Touch the screen with the touch pen to select **Internet**.

2 Touch the screen with the touch pen to select the desired option or use the toolbar.

No.	Description
1	Enter the Pentouch Home menu.
2	Enter drawing mode When in drawing mode, the virtual keyboard will be hidden.
3	Virtual keyboard tab : Insert text. Select the virtual keyboard tab to display the keyboard on the screen. For some operating systems, two virtual keyboards may be displayed.
4	Returns to the previous level. Drawings will be cleared when you exit the drawing mode.

Specialized toolbar functions

No.	Description
1	Memo Select image for memo. 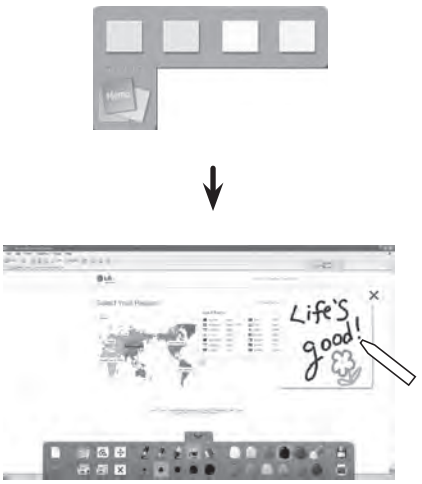
2	Capture all: The Save confirmation message is shown.
3	Capture selection: The Save confirmation message is shown after you select an area to capture.
4	Save

ENGLISH

Using the My Office function

You can draw or write in Microsoft Office or PDF files.

- Applications that support Microsoft Office and PDF files must be installed on your computer.
- Folders and formats supported are displayed in a window.

Supported file format

Type	Supported file format
Office Files	2003 version ppt, doc, xls 2007 version pptx, docx, xlsx All Microsoft PowerPoint files (*.ppt, .pptx) All Microsoft Word files (*.doc, .docx) All Microsoft Excel files (*.xls, .xlsx) Outlook data files (*.msg, *.eml)
PDF Files	Adobe PDF files (*.pdf)

1 Touch the screen with the touch pen to select **My Office**.

2 Touch the screen with the touch pen, then in the Open popup window, select the file to open.

3 Touch the screen with the touch pen to select the desired option or use the toolbar.

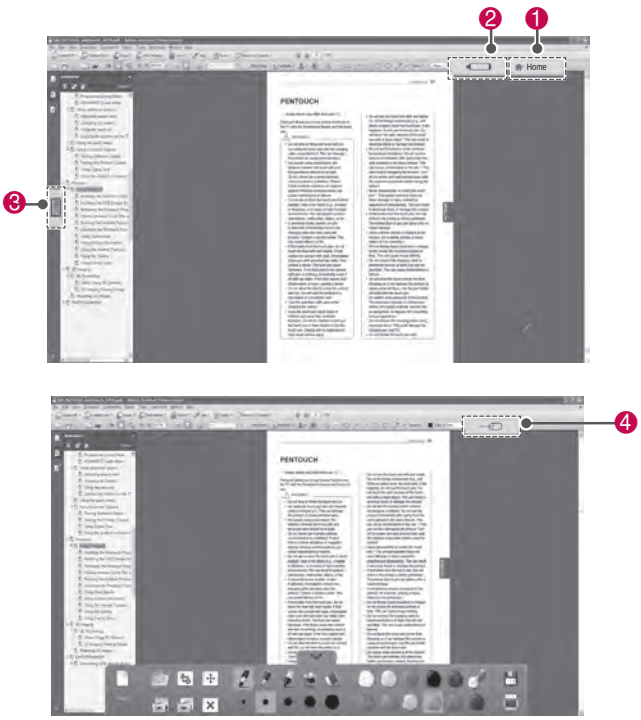

No.	Description
1	Enter the Pentouch Home menu.
2	Enter painting mode When in painting mode, the virtual keyboard will be hidden.
3	Virtual keyboard tab : Insert text. Select the virtual keyboard tab to display the keyboard on the screen. For some operating systems, two virtual keyboards may be displayed.
4	Returns to the previous level. Drawings will be cleared when you exit the drawing mode.

Specialized toolbar functions

No.	Description
1	Memo Select image for memo. 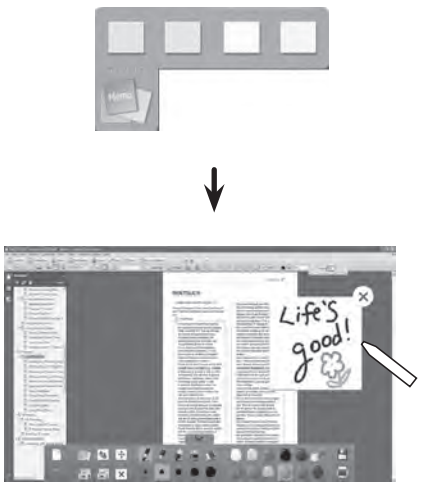
2	Capture all: The Save confirmation message is shown.
3	Capture selection: The Save confirmation message is shown after you select an area to capture.
4	Save

ENGLISH

3D IMAGING

(Only 3D Models)

3D Technology

This TV can display in 3D via 3D broadcasting or when the TV is connected to a compatible device, such as a Blu-ray 3D Player. You need such a device to watch the TV in 3D. The 3D TV displays two separate pictures formatted for each eye. The viewer needs to wear 3D glasses in order to see these images in 3D format.

WARNING

- We recommend that you maintain a distance of at least twice the screen diagonal length when watching 3D videos.
- If you watch the 3D imaging too closely or for a long period of time, it may harm your eyesight.
- Watching the TV or playing video games that incorporate 3D imaging with the 3D glasses for a long period of time can cause drowsiness, headaches or fatigue to you and/or your eyes. If you have a headache, or otherwise feel fatigued or drowsy, stop watching the TV and take a rest.
- Pregnant woman, seniors, persons with heart problems or persons who experience frequent drowsiness should refrain from watching 3D TV.
- Some 3D imaging may cause you to duck or dodge the image displayed in the video. Therefore, it is best if you do not watch 3D TV near fragile objects or near any objects that can be knocked over easily.
- Please prevent children under the age of 5 from watching 3D TV. It may affect their vision development.
- Warning for photosensitization seizure:
  Some viewers may experience a seizure or epilepsy when exposed to certain factors, including flashing lights or images in TV or video games. If you or anybody from your family has a history of epilepsy or seizure, please consult with your doctor before watching 3D TV.
  Also certain symptoms can occur in unspecified conditions without any previous history. If you experience any of the following symptoms, immediately stop watching the 3D imaging and consult a doctor: dizziness or lightheadedness, visual transition or altered vision, visual or facial instability, such as eye or muscle twitching, unconscious action, convulsion, loss of conscience, confusion or disorientation, loss of directional sense, cramps, or nausea. Parents should monitor their children, including teenagers, for these symptoms as they may be more sensitive to the effects of watching 3D TV.
- Risk of photosensitization seizure can be reduced with the following actions.
  - » Take frequent breaks from watching 3D TV.
  - » For those who have vision that is different in each eye, they should watch the TV after taking vision correction measures.
  - » Watch the TV so that your eyes are on the same level as the 3D screen and refrain from sitting too closely to the TV.
  - » Do not watch the 3D imaging when tired or sick, and avoid watching the 3D imaging for a long period of time.
  - » Do not wear the 3D glasses for any other purpose than viewing 3D imaging on a 3D TV.
  - » Some viewers may feel disoriented after watching 3D TV. Therefore, after you watch 3D TV, take a moment to regain awareness of your situation before moving.

ENGLISH

NOTE

- To watch the TV in 3D, you must put on your 3D glasses. For best results, you should wear LG Brand 3D glasses. The 3D imaging may not display properly when using another brand of 3D glasses. Please see the 3D glasses manual for instructions on how to use the 3D glasses.
- After powering on the TV, a few seconds may be needed for your TV to calibrate.
- It may take a moment for you to see the 3D imaging if you look away from the TV and then revert your eyes back to the 3D programme.
- If there is an obstacle between the TV and the 3D glasses, the 3D imaging may not display properly.
- Do not use the TV in close proximity to other electronic equipments and RF equipments.
- When watching 2D images, it is recommended to take off the 3D glasses. If you watch 2D images with the 3D glasses on, you may see distorted images.
- The TV may flicker slightly if the 3D imaging is displayed under fluorescent. In such instances, It is recommened to turn the lights off or to dim the lights.

When Using 3D Glasses

CAUTION

- 3D glasses are sold separately. Refer to the 3D glasses manual for operating instructions.
- Do not use the 3D glasses to replace your corrective glasses, sunglasses or protective goggles.
- Do not store the 3D glasses in hot or cold locations.
- Do not drop objects onto the 3D glasses. Do not drop or bend the glasses.
- Since the lenses of the 3D glasses are easily scratched, make sure to clean only with a soft cloth. Shake off any dust before using the cloth since the glasses are easily scratched.

3D Imaging Viewing Range

TV size, viewing angle & other circumstances may change the viewing distance and the angle of view.

Viewing Distance	2 m to 10 m
Viewing Angle	120º (When the viewing distance is 2 m)

ENGLISH

Watching 3D images

- Image shown may differ from your TV.

View 3D mode for 3D images

1 Play the 3D video or select 3D channel.
(2D to 3D mode is available with all contents)

2 Press 3D and select same type in your displayed picture on the screen.
(Select type on "3D Video" tab)

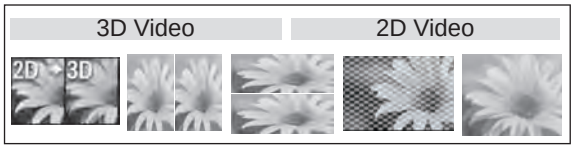

* Notice : Turn on the 3D mode automatically for HDMI input playing the 3D blueray titles.

3 Press OK on displayed information window.

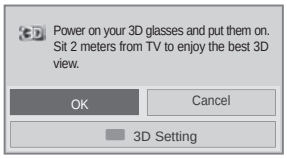

4 To turn off the 3D mode, press 3D and select OK.

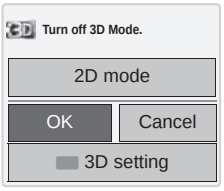

View 2D mode for 3D images

1 Play the 3D video or select 3D channel.

2 Press 3D and select same type in your displayed picture on the screen.
(Select type on “2D Video” tab)

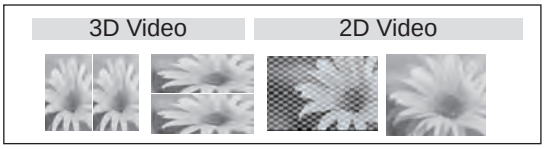

3 To turn off the 2D mode, press 3D and select OK.

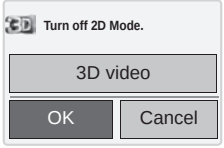

Using 3D quick menu option

1 Press **3D SETTING**.

2 Use the following options while viewing 3D imaging.

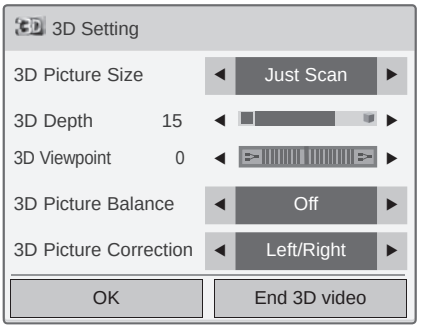

(Depending on model)

Button	Description
3D Picture Size	Cuts off the outer edges of the picture and stretch it to fit the full screen in 3D mode.
3D Depth	Adjusts the distance between the object and the background in the picture to enhance the 3D effect in 2D to 3D mode.
3D Viewpoint	Brings the picture (including both the object and background images) to the front or back to enhance the 3D effect in 3D mode.
3D Picture Balance	Adjusts the colour and brightness difference between the right and left sides of the picture in 3D mode.
3D Picture Correction	Changes the order of images in the right and left sides of the picture in 3D mode.

ENGLISH

CAUTION

- Some menus may not work while watching the TV in 3D.
- If used 3D effect on the 2D source, 3D may not work.
- The 3D imaging mode is disabled automatically when switching DTV channels or input source.
- The screen may not be displayed properly if you view 2D DTV images in 3D imaging mode.
- 3D effect can be seen when 3D Mode is selected appropriately for the 3D input signal supplied to the TV.
- For *mpo files (3D camera files), the 3D imaging mode is enabled automatically.
- 3D may not be displayed properly for some PC graphics cards.

ENTERTAINMENT

Connecting to a wired network

(Depending on model)

Connect the TV to a local area network (LAN) via the LAN port as shown on the following illustration and set up the network settings.
If wired and wireless networks are both available, wired is the preferred method.
After making a physical connection, a small number of home networks may require the TV network settings to be adjusted. For most home networks, the TV will connect to automatically without any adjustments.
For detail information, contact your internet provider or router manual.

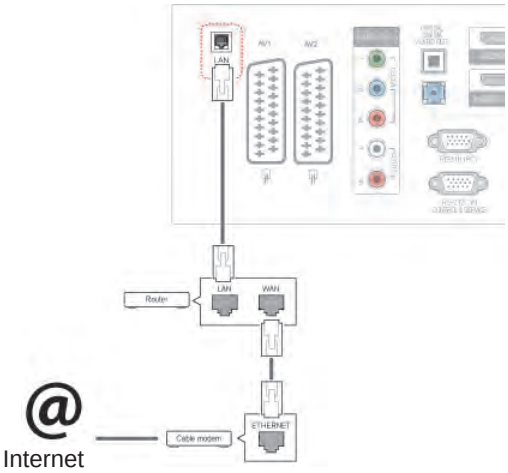

CAUTION

- Do not connect a modular phone cable to the LAN port.
- Since there are various connection methods, please follow the specifications of your telecommunication carrier or internet service provider.

To set up the network seetings: (Even if your TV has already connected automatically, running setup again will not harm anything),

1. Press **Home** to access the main menus.
2. Press the Navigation buttons to scroll to **SETUP** and press **OK**.
3. Press the Navigation buttons to scroll to **NETWORK** and press **OK**.
4. Press the Navigation buttons to select **Network Setting** and press **OK**.
5. If wired and wireless are simultaneously connected, press the Navigation buttons to select **Wired** and press **OK**.
6. If you already set Network Setting, select **Resetting**. The new connection settings resets the current network settings.
7. Select **IP Auto Setting** or **IP Manual Setting**.
   - If selecting **IP Manual Setting**, press the Navigation and Number buttons. IP addresses will need to be input manually.
   - **IP Auto Setting**: Select this if there is a DHCP server (Router) on the local area network (LAN) via wired connection, the TV will automatically be allocated an IP address. If you're using a broadband router or broadband modem that has a DHCP (Dynamic Host Configuration Protocol) server function. The IP address will automatically be determined.
8. When you are finished, press **EXIT**.

NOTE

- If you want to access the Internet directly on your TV, the broadband internet connection should always be on.
- If you cannot access the Internet, check the network conditions from a PC on your network.
- When you use **Network Setting**, check the LAN cable or check if DHCP in the router is turned on.
- If you do not complete the network settings, the network may not work properly.

Tips for Network setting

- Use a standard LAN cable with this TV. Cat5 or better with a RJ45 connector.
- Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the player to the home network, quickly power off and/or disconnect the power cable of the home network router or cable modem. Then power on and/or connect the power cable again.
- Depending on the internet service provider (ISP), the number of devices that can receive internet service may be limited by the applicable terms of service. For details, contact your ISP.
- LG is not responsible for any malfunction of the TV and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection, or other connected equipment.
- LG is not responsible for problems within your internet connection.
- Some content available through the network connection may not be compatible with the TV. If you have questions about such content, please contact the producer of the content.
- You may experience undesired results if the network connection speed does not meet the requirements of the content being accessed.
- Some internet connection operations may not be possible due to certain restrictions set by the Internet service provider (ISP) supplying your broadband Internet connection.
- Any fees charged by an ISP including, without limitation, connection charges are your responsibility.
- A 10 Base-T or 100 Base-TX LAN port is required when using a wired connection to this TV. If your internet service does not allow for such a connection, you will not be able to connect the TV.
- A DSL modem is required to use DSL service and a cable modem is required to use cable modem service. Depending on the access method of and subscriber agreement with your ISP, you may not be able to use the internet connection feature contained in this TV or you may be limited to the number of devices you can connect at the same time. (If your ISP limits sub-scription to one device, this TV may not be allowed to connect when a PC is already connected.)
- The use of a “Router” may not be allowed or its usage may be limited depending on the policies and restrictions of your ISP. For details, contact your ISP directly.

Network Status

1. Press **Home** to access the main menus.
2. Press the Navigation buttons to scroll to **NETWORK** and press **OK**.
3. Press the Navigation buttons to select **Network Status**.
4. Press **OK** to check the network status.
5. When you are finished, press **EXIT.**

Option	Description
Setting	Return to the network setting menu.
Test	Test the current network status after setting the network.
Close	Return to the previous menu.

ENGLISH

Connecting USB storage devices

Connect USB storage devices such as a USB flash memory, external hard drive to the TV and use multimedia features (See “Browsing files”on p.59).
Connect a USB flash memory or USB memory card reader to the TV as shown on the following illustration. The My media screen appears.

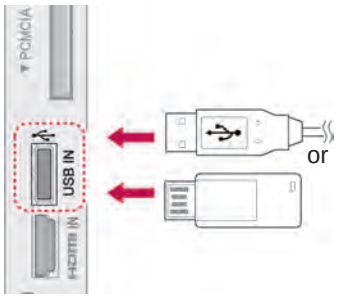

To disconnect a USB storage device, make sure to end the connection properly to prevent damages to the TV or files.

1. Press **Q.MENU** to access the quick menus.
2. Press the Navigation buttons to scroll to **USB Device** and press **OK**.
3. Press the Navigation buttons to scroll to **Eject** and press **OK**.
4. Disconnect the USB storage device only when the message says that it is safe to remove.

CAUTION

- Do not turn the TV off or remove a USB storage device while the USB storage device is connected to the TV, as this could result in loss of files or damage to the USB storage device.
- Back up your files saved on a USB storage device frequently, as you may lose or damage the files and this may be not covered by the warranty.

Tips for using USB storage devices

- Only a USB storage device is recognizable.
- If the USB storage device is connected through a USB hub, the device is not recognizable.
- A USB storage device using an automatic recognition program may not be recognized.
- A USB storage device which uses its own driver may not be recognized.
- The recognition speed of a USB storage device may depend on each device.
- Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please do not connect the USB storage device which was artificially maneuvered on the PC. The device may cause the product to malfunction or fail to be played. Never forget to use only a USB storage device which has normal music files, image files or movie files.
- Please use only a USB storage device which was formatted as a FAT32 file system, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility program which is not supported by Windows, it may not be recognized.
- Please connect power to a USB storage device(over 0.5 A) which requires an external power supply. If not, the device may not be recognized.
- Please connect a USB storage device with the cable offered by the device maker.
- Some USB storage devices may not be supported or operated smoothly.
- File alignment method of USB storage device is similar to Window XP and filename can recognize up to 100 English characters.
- Be sure to back up important files since data stored in a USB memory device may be damaged. We will not be responsible for any data loss.
- If the USB HDD does not have an external power source, the USB device may not be detected. So be sure to connect the external power source.
  - Please use a power adaptor for an external power source. We do not guarantee an USB cable for an external power source.

- If your USB memory device has multiple partitions, or if you use a USB multi-card reader, you can use up to 4 partitions or USB memory devices.
- If a USB memory device is connected to a USB multi-card reader, its volume data may not be detected.
- If the USB memory device does not work properly, disconnect and reconnect it.
- How fast a USB memory device is detected differs from device to device.
- If the USB is connected in Standby Mode, specific hard disk will automatically be loaded when the TV is turned on.
- The recommended capacity is 1 TB or less for a USB external hard disk and 32 GB or less for USB memory.
- Any device with more than the recommended capacity may not work properly.
- If a USB external hard disk with a “Energy Saving” function does not work, turn the hard disk off and on again to make it work properly.
- USB storage devices below USB 2.0 are supported as well. But they may not work properly in the movie list.
- Maximum of 999 folders or files can be recognized under one folder.

Browsing files

Access the photo, music, or movie lists and browse files.

1 Connect a USB storage device.

2 Press **Home** to scroll to main menus.

3 Press the Navigation buttons to scroll to **My Media** and press **OK**.

4 Press Navigation buttons to scroll to **Photo List**, **Music List**, or **Movie List** and press **OK**.

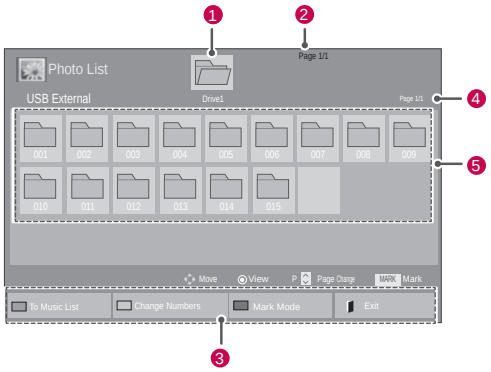

No.	Description
1	Moves to upper level folder
2	Current page/Total pages
3	Corresponding buttons on the remote control
4	Current page/ total pages of contents under the folder focused on 1
5	Contents under the folder focused on 1
Buttom	**Description**
Green button	Repeatedly, press the GREEN button to converted to **Photo List**->**Music List**, **Music List**->**Movie List** or **Movie List**->**Photo List**.
Yellow button	A method to view in 5 large thumbnail or simple list.
Blue button	Convert to Mark Mode.

ENGLISH

Supported file format

<table>
<tr><th>Type</th><th colspan="4">Supported file format</th></tr>
<tr><td>Movie</td><td colspan="4">DAT,MPG,MPEG,VOB,AVI,DIVX,MP4,MKV, TS,TRP,TP,ASF,WMV,FLV)

Movie(*.mpg/*.mpeg/*dat/*.ts/*.trp/*.tp/*. vob/*.mp4/*.mov/*.mkv/*.divx/*.avi/*.asf/*. wmv/*.flv/*.avi(motion-jpeg)/*. mp4(motion-jpeg)/*.mkv(motion-jpeg))sup-porting file

Video format : DivX3.11, DivX4.12, DivX5.x, DivX6, Xvid1.00, Xvid1.01, Xvid1.02, Xvid1.03, Xvid1.10 beta-1/beta-2, Mpeg-1, Mpeg-2, Mpeg-4, H.264/AVC, VC1, JPEG, Sorenson H.263

Audio format : Dolby Digital, AAC, Mpeg, MP3, LPCM, HE-AAC, ADPCM, WMA

Bit rate : within 32 kbps to 320 kbps(MP3)

External Subtitle format : *.smi/*.srt/*.sub (MicroDVD,Subviewer1.0/2.0)/*.ass/*.ssa/*. txt(TMPlayer)/*.psb(PowerDivX)

Internal Subtitle format : only, XSUB (It is the subtitle format used in DivX6 files)</td></tr>
<tr><td>Photo</td><td colspan="4">JPEG

Baseline : 64 x 64 to 15360 x 8640
Progressive : 64 x 64 to 1920 x 1440

• You can play JPEG files only.
• Non-supported files are displayed in the form of predefined icon.</td></tr>
<tr><td></td><td colspan="4">Only 3D Models</td></tr>
<tr><td></td><td>File Extensions</td><td>Item</td><td colspan="2">Profile</td></tr>
<tr><td>2D</td><td>jpeg
jpg
jpe</td><td>supported file format</td><td colspan="2">• SOF0: baseline
• SOF1: Extend Sequential
• SOF2: Progressive</td></tr>
<tr><td></td><td></td><td>photo size</td><td colspan="2">• Min: 64 X 64
• Max-Normal Type: 15360 (W) X 8640 (H)
• Progressive Type: 1920 (W) X 1440 (H)</td></tr>
<tr><td>3D</td><td>mpo</td><td>supported file format</td><td colspan="2">mpo</td></tr>
<tr><td></td><td></td><td>photo size</td><td colspan="2">• 4:3 size: 3,648 X 2,736
2,592 X 1,944
2,048 X 1,536
• 3:2 size: 3,648 X 2,432</td></tr>
<tr><td>Music</td><td colspan="4">MP3

Bit rate 32 to 320
• Sampling rate MPEG1 Layer3 : 32 kHz, 44.1 kHz, 48 kHz
• Sampling rate MPEG2 Layer3 : 16 kHz, 22.05 kHz, 24 kHz
• Sampling rate MPEG2.5 Layer3 : 8 kHz, 11.025 kHz, 12 kHz</td></tr>
</table>

Viewing movies

Play video files on the TV. Your TV displays all of the video files saved in a USB storage device or shared folder on a PC.

1 Press the Navigation buttons to scroll to **My Media** and press **OK**.

2 Press the Navigation buttons to scroll to **Movie List** and press **OK**.

3 Select **Drive1** to access the connected USB storage device.

4 Press the Navigation buttons to scroll to a folder you want and press **OK**.

5 Press the Navigation buttons to scroll to a file you want and press **OK**.

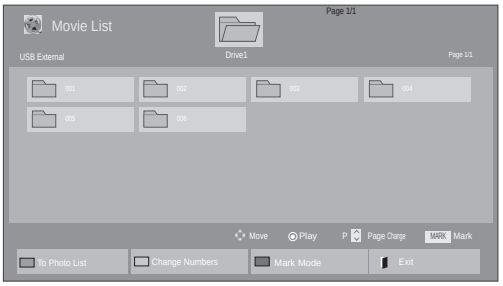

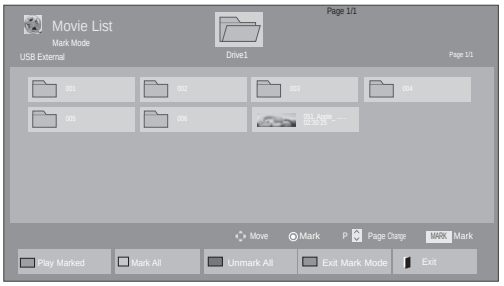

Menu	Description
Play Marked	Play the selected movie file. Once a movie file finishes playing, the next selected one will be played automatically.
Mark All	Mark all movie files on the screen.
Unmark All	Deselect all marked movie files.
Exit Mark Mode	Exit the Mark Mode.

6 Play a movie.

NOTE

- Non-supported files are displayed the preview image by icon only .
- Abnormal files are displayed in the form of bitmap .

7 Control playback by using the following buttons.

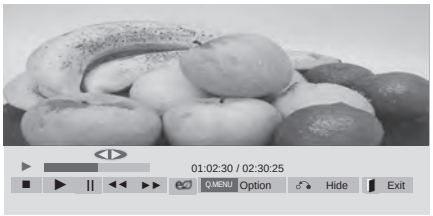

Button	Description
■	Stops the playback
▶	Plays a video
II	Pauses or resumes the playback
◀◀	Scans backward in a file
▶▶	Scans forward in a file
Home or **Q.MENU**	Show the **Option** menu.
BACK	Hide the menu on the full-sized screen.
EXIT	Return to **Movie List**.
< or >	Skips to specific points in a file during playback. The time of a specific point will appear on the status bar. In some files, this function may not work properly.
ENERGY SAVING	Press the **ENERGY SAVING** button repeatedly to increase the brightness of your screen.
AV MODE	Press the **AV MODE** button repeatedly to select the desired source.

Tips for using playing video files

- Some user-created subtitles may not work properly.
- Some special characters are not supported in subtitles.
- HTML tags are not supported in subtitles.
- Subtitles in languages other than the supported languages are not available.
- The screen may suffer temporary interruptions (image stoppage, faster playback, etc.) when the audio language is changed.
- A damaged movie file may not be played correctly, or some player functions may not be usable.
- Movie files produced with some encoders may not be played correctly.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- HD videos with a maximum of 1920x1080@25/30P or 1280x720@50/60P are supported, depending on the frame.
- Videos with resolutions higher than 1920X1080@25/30P or 1280x720@50/60P may not work properly depending on the frame.
- Movie files other than the specified types and formats may not work properly.
- Max bitrate of playable movie file is 20 Mbps. (only, Motion JPEG : 10 Mbps)
- We do not guarantee smooth playback of profiles encoded level 4.1 or higher in H.264/AVC.
- DTS Audio codec is not supported.
- A movie file more than 30 GB in file size is not supported for playback.
- A DivX movie file and its subtitle file must be located in the same folder.
- A video file name and its subtitle file name must be identical for it to be displayed.
- Playing a video via a USB connection that doesn't support high speed may not work properly.
- Files encoded with GMC(Global Motion Compensation) may not be played.
- When you are watching the movie by Movie List function, you can adjust an image by Energy Saving and AV Mode key on the remote control. User setup for each image mode does not operate.

ENGLISH

Video options

1 Press **Q. MENU** to access the **Pop-Up** menus.

2 Press the Navigation buttons to scroll to **Set Video Play., Set Video.** or **Set Audio.** and press **OK**.

NOTE

- Option values changed in **Movie List** does not affect **Photo List** and **Music List**.
- Option value changed in **Photo List** and **Music List** are changed likewise in **Photo List** and **Music List** excluding **Movie List**.
- When replaying the video file after stopping, you can play from where it stopped previously.

When you select the **Set Video Play,**,

1 Press the Navigation buttons to scroll to show the **Picture Size, Audio Language, Subtitle Language** or **Repeat**.

2 Press the Navigation buttons to scroll to make appropriate adjustments.

Menu	Description
Picture Size	Selects your desired picture format during movie play.
Audio Language	Changes the Language Group of the audio during movie play. Files with a single audio track cannot be selected.
Subtitle Language	Turn on/off the subtitle.
Language	Activated for SMI subtitle and can select the language within the subtitle.
Code Page	Can select the font for subtitle. When set to default, same font as general menu will be used.
Sync	Adjusts the time synchronisation of the subtitle from -10 secs to +10 secs by steps of 0.5 secs during movie play.
Position	Changes the position of the subtitle either up or down during movie play.
Size	Selects your desired Subtitle size during movie play.
Repeat	Turn on/off repeat function of movie playback. When turned on, the file within the folder will be played back repeatedly. Even when the repeated playback is turned off, it can run the playback if the file name is similar to the previous file.

Subtitle Language	Support Language
Latin1	English, Spanish, French, German, Italian, Swedish, Finnish, Dutch, Portuguese, Danish, Romanian, Norwegian, Albanian, Gaelic, Welsh, Irish, Catalan,Valencian
Latin2	Bosnian, Polish, Croatian, Czech, Slovak, Slovenian, Serbian, Hungarian
Latin4	Estonian, Latvian, Lithuanian
Cyrillic	Bulgarian, Macedonian, Russian, Ukrainian, Kazakh
Greek	Greek
Turkish	Turkish

NOTE

- Only 10,000 of sync blocks can be supported within the subtitle file.
- When playing a video, you can adjust the Picture Size by pressing the **RATIO** button.

When you select the **Set Video,**,

1 Press the Navigation buttons to scroll to make appropriate adjustments. (See p.71)

When you select the **Set Audio,**,

1 Press the Navigation buttons to scroll to show the **Sound Mode, Auto Volume, Clear Voice II** or **Balance**.

2 Press the Navigation buttons to scroll to make appropriate adjustments. (See p.76)

Viewing photos

View image files saved in a USB storage device or shared folder on a PC through the network connection. The displays on the screen may differ from the model.

1 Press the Navigation buttons to scroll to **My Media** and press **OK**.

2 Press the Navigation buttons to scroll to **Photo List** and press **OK**.

3 Press the Navigation buttons to select **Drive1** to access the connected USB storage device.

4 Press the Navigation buttons to scroll to a folder you want and press **OK**.

5 Press the Navigation buttons to scroll to a file you want and press **OK**.

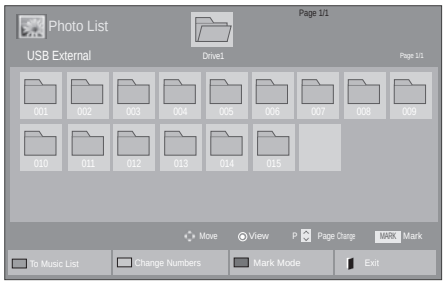

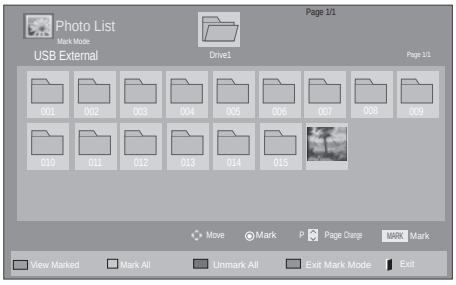

Menu	Description
View Marked	Display the selected photo file.
Mark All	Mark all photo files on the screen.
Unmark All	Deselect all marked photo files.
Exit Mark Mode	Exit the Mark Mode.

6 View photos.

NOTE

- Non-supported files are displayed the pre-view image by icon only .
- Abnormal files are displayed in the form of bitmap .

ENGLISH

Using photo options

Use the following options while viewing photos.

Options Number of selected photos

Option	Description
Slideshow	Starts or stops a slideshow with selected photos. If there are no selected photos, all photos saved in the current folder display during a slideshow. To set a slideshow speed, select **Option**.
BGM	Turns the background music on or off. To set the background music folder, select **Option**. You can adjust Option by Q.MENU or Home button on the remote control.
↻ (Rotate)	Rotates photos clockwise (90°, 180°, 270°, 360°). NOTE • The supported photo size is limited. You cannot rotate a photo if the resolution of the rotated width is larger than the supported resolution size.
🔍	View the photo by zoom in 2, 4 times.
ENERGY SAVING	Press the **ENERGY SAVING** button repeatedly to change the brightness of your screen.
Option	• **Slide Spee**d: Selects a slideshow speed (**Fast**, **Medium**, **Slow**). • **BGM**: Selects a music folder for the background music. NOTE • You cannot change the music folder while the background music is playing. • You can only select the MP3 folder saved on the device that currently displays the photo.
Hide	Hides the option window. To display the options, press **OK**.
EXIT	Return to **Photo List**.

Photo options

1 Press **Q. MENU** or **Home** to show the **Option** menus.

2 Press the Navigation buttons to scroll to **Set Photo View., Set Video.** or **Set Audio.** and press **OK**.

NOTE

- Option values changed in **Movie List** does not affect **Photo List** and **Music List.**
- Option value changed in **Photo List** and **Music List** are changed likewise in **Photo List** and **Music List** excluding **Movie List**.

When you select the **Set Photo View**,

1 Press the Navigation buttons to scroll to select **Slide Speed** or **BGM.**.

2 Press the Navigation buttons to scroll to make appropriate adjustments.

When you select the **Set Video**,

1 Press the Navigation buttons to scroll to make appropriate adjustments. (See p.71)

When you select the **Set Audio,**,

1 Press the Navigation buttons to scroll to show the **Sound Mode, Auto Volume, Clear Voice II** or **Balance**.

2 Press the Navigation buttons to scroll to make appropriate adjustments. (See p.76)

Listening to music

1 Press the Navigation buttons to scroll to **My Media** and press **OK**.

2 Press the Navigation buttons to scroll to **Music List** and press **OK**.

3 Press the Navigation buttons to select **Drive1** to access the connected USB storage device.

4 Press the Navigation buttons to scroll to a folder you want and press **OK**.

5 Press the Navigation buttons to scroll to a file you want and press **OK**.

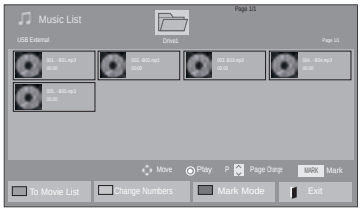

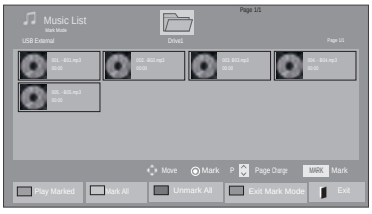

Menu	Description
Play Marked	Display the selected music file.
Mark All	Mark all music files on the screen.
Unmark All	Deselect all marked music files.
Exit Mark Mode	Exit the Mark Mode.

6 Play music.

7 Control playback by using the following buttons.

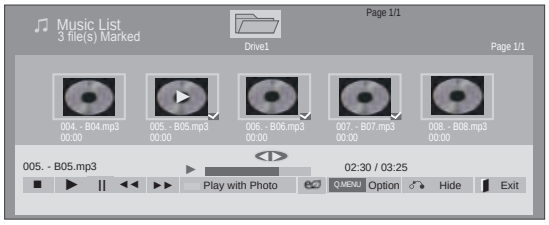

Button	Description
■	Stops playback
▶	Plays a music file
❚❚	Pauses or resumes playback
▶▶	Skips to the next file
◀◀	Skips to the previous file
◀◀ or ▶▶	When playing, When you press the ◀◀ button, the previous music file will be played. When you press the ▶▶ button, the next music file will be played.
Green button	Start playing the selected music files and then move to the **Photo List**.
ENERGY SAVING	Press the **ENERGY SAVING** button repeatedly to change the brightness of your screen.
Home or **Q.MENU**	Show the Option menu.
Hide	Hides the option window. To display the options, press **OK**.
EXIT	When you press the **EXIT** button while the Music player is displayed, only the music will be stopped and the player will not return to normal TV viewing. When you press the **EXIT** button while the music is stopped or while the music player is hidden, the player will return to normal TV viewing.
< or >	When using the **<** or **>** button during playback a cursor indicating the position can be played.

Tips for playing music files

- This unit cannot support the ID3 Tag embedded MP3 files.

ENGLISH

NOTE

- Non-supported files are displayed the pre-view image by icon only .
- Abnormal files are displayed in the form of bitmap .
- A damaged or corrupted music does not play but displays 00:00 in playtime.
- A music downloaded from a paid service with copyright protection does not start but displays inappropriate information in playtime.
- If you press OK, ■ buttons, screen saver is stopped.
- The PLAY(▶), Pause(❚❚), ■ , ▶▶, ◀◀ buttons on the remote control are also available in this mode.
- You can use the ▶▶ button to select the next music and the ◀◀ button to select the previous music.

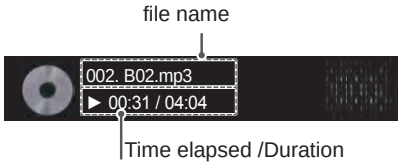

Music options

1 Press **Q. MENU** to access the **Pop-Up** menus.

2 Press the Navigation buttons to scroll to **Set Audio Play.** or **Set Audio.** and press **OK**.

NOTE

- Option values changed in **Movie List** does not affect **Photo List** and **Music List**.
- Option value changed in **Photo List** and **Music List** are changed likewise in **Photo List** and **Music List** excluding **Movie List.**

When you select the **Set Audio Play.**,

1 Press the Navigation buttons to scroll to select the **Repeat** or **Random**.

2 Press the Navigation buttons to scroll to make appropriate adjustments.

When you select the **Set Audio,**,

1 Press the Navigation buttons to scroll to select the **Sound Mode, Auto Volume, Clear Voice II** or **Balance**.

2 Press the Navigation buttons to scroll to make appropriate adjustments.(See p.76)

DivX registration code

Registering the DivX code

Check and register the DivX registration code of your TV so that you can rent or purchase the latest movies at www.divx.com/vod. To play a rented or purchased DivX file, the file's registration code should be same with your TV's DivX registration code.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **MY MEDIA** and press **OK**.

3 Press the Blue button.

4 Press the Navigation buttons to scroll to **DivX VOD Registration** and press **OK**.

5 View the registration code of your TV.

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

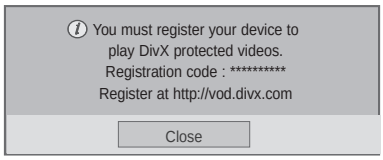

Deactivating the DivX feature

Deactivate all of the devices through the web server and block devices from activating.
Delete the existing authentication information to receive a new DivX user authentication for the TV. Once this function is executed, a DivX user authentication is required again to see DivX DRM files.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **MY MEDIA** and press **OK**.

3 Press the Blue button.

4 Press the Navigation buttons to scroll to **DivX Deregistration** and press **OK**.

5 Press the Navigation buttons to select **Yes** to confirm.

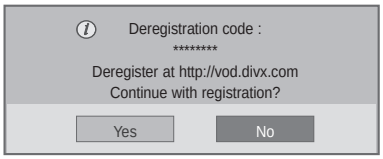

6 When you are finished, press **EXIT.**
When you return to the previous menu, press **BACK**.

NOTE

- Movie files are supported as follows
  Resolution : under 1920x1080 WxH pixels
  Frame rate : under 30 frames/sec(1920x1080), under 60 frames/sec(under 1280x720)
- Video Codec : MPEG 1, MPEG 2, MPEG 4, H.264/AVC, DivX 3.11, DivX 4.12, DivX 5.x, DivX 6, Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1, Xvid 1.10-beta2, JPEG, VC1, Sorenson H.263/H.264.

CUSTOMIZING TV SETTING

- Image shown may differ from your TV.

Accessing main menus

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to one of the following menus and press **OK**.

3 Press Navigation buttons to scroll to the setting or option you want and press **OK**.

4 When you are finished, press **EXIT**.

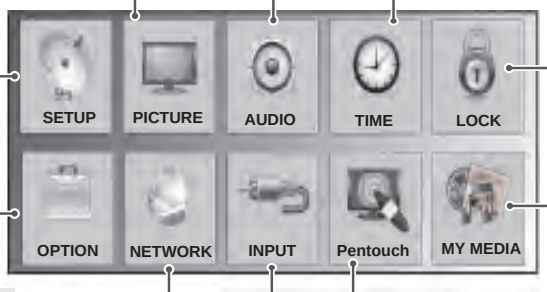

PICTURE (See p.70)
Adjusts the image size, quality, or effect

AUDIO (See p.76)
Adjusts the sound quality, effect, or volume level

TIME (See p.79)
Sets the time, date, or Timer feature

LOCK (See p.80)
Locks or unlocks channels and programmes

SETUP (See p.69)
Sets up and edit programmes

OPTION (See p.81)
Customizes the general settings

MY MEDIA (See p.58)
Display and play movie, photo and music content stored on your USB

NETWORK(Depending on model) (See p.83)
Sets up the network setting.

INPUT(Depending on model) (See p.31)
Views the input sources with their labels

Pentouch (See p.36)
Pentouch allows you to use various functions with touch pen on the TV.

ENGLISH

Customizing settings

SETUP settings

- Image shown may differ from your TV.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **SETUP** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT.**

The available Programme settings are described in the following:

Setting	Description
Auto Tuning	Tunes and stores all available programmes through antennas or cable inputs (See p.19).
Manual Tuning	Tunes and stores the programmes you want manually (See p.21).
Programme Edit	Edits programmes. (See p.23).
CI information	Enables you to watch some encrypted services (pay services).(See p.25).
Cable DTV Setting (In Cable mode only)	The range that a user can select from the **Service Operator** menu differs depending on number of **Service Operator** supported by each country, and if number of supported **Service Operator** for each country is 1, corresponding function becomes non-activation. After changing **Service Operator**, a warning window saying that channel map will be deleted when OK button is pressed or **Close** is selected, and a Auto-tuning pop-up window appears when '**YES**' is selected.(See p.21).

ENGLISH

PICTURE settings

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **PICTURE** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT.**

• Image shown may differ from your TV.

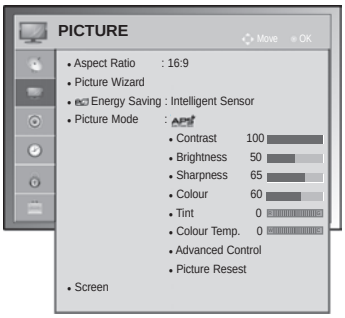

The available picture settings are described in the following.

Setting	Description	
Aspect Ratio	Changes the image size to view images at its optimal size (See p.29).	
Picture Wizard	Adjusts the image quality and calibrates the screen by following the on-screen instructions. The customized options will be saved as **Expert1** in the **Picture Mode**.	
	Standard	Mode to set standard picture quality. (**Black Level**, **White Level**, **Tint**, **Colour**, **Horizontal Sharpness**, **Vertical Sharpness**)
	Preferred	Mode to set user preferred picture quality rather than standard picture. (**Black Level**, **White Level**, **Tint**, **Colour**, **Sharpness**, **Dynamic Contrast**, **Colour Temperature**)
	NOTE • If you stop the setting before the final stage, the changes will not be applied. • If you use **Picture Wizard**, the Energy saving feature will turn off automatically. • To reset changes made by **Picture Wizard**, operate **Picture Reset** when **Picture Mode** is on **Expert1**. • In RGB-PC/HDMI-PC/DVI-PC mode, the changed **Colour**, **Tint** and **H/V Sharpness** values are not applied.	
Energy Saving	Reduces the power consumption by adjusting the screen brightness.	
	Option	
	Intelligent sensor	*This feature is not available for all models. The most suitable brightness is automatically adjusted according to the surrounding conditions.
	Off	The **Energy Saving** is off
	Minimum/Medium/Maximum	Selects the brightness level.
	Screen off	The screen turns off in 3 seconds.
	NOTE • When you select **Screen Off**, the screen will be turned off in 3 seconds and **Screen Off** will start. • If you adjust "**Energy Saving**-**Intelligent Sensor**", **Sharpness**, **Colour**, **Colour Temperature** feature will not work.	

ENGLISH

Setting	Description	
Picture Mode	Selects one of the preset image or customizes options in each mode for the best TV screen performance. You are also able to customize advanced options of each mode. The available preset picture modes vary depending on the TV.	
	Mode	
	Vivid	Adjusts the video image for the retail environment by enhancing the contrast, brightness, colour, and sharpness.
	Standard	Adjusts the image for the normal environment.
	APS	Optimizes power consumption.
	Cinema, THX Cinema or THX 3D Cinema	Optimizes the video image for a cinematic look to enjoy movies as if you are in a movie theater.
	THX Bright Room	This is the specification to optimize TV viewing in Bright Room.
	Sport	Optimizes the video image for high and dynamic actions by emphasizing primary colours such as white, grass, or sky blue.
	Game	Optimizes the video image for a fast gaming screen such as PCs or games.
	Photo	Optimizes the still image like a photo file in USB mode. » e.g.) when connecting the external device like a DSLR.
	Expert	Adjusts the detailed video image settings for video experts as well as general viewers.

NOTE

- **Picture Mode** adjusts the TV for the best picture appearance. Select the preset value in the **Picture Mode** menu based on the programme category.
- When the Intelligent sensor function is on, the most suitable picture is automatically adjusted according to the surrounding conditions.
- You can also adjust **Picture Mode** in the **Q. Menu**.
- APS (Auto Power Saving) : Maximize reducing the power consumption without hurting the picture quality.
- If you adjust "**Picture Mode**-THX **Cinema**, THX **Bright Room**", "**Energy Saving**-**Intelligent Sensor**, **Minimum**, **Medium**, **Maximum**" feature will not work.
- If you adjust "**Picture Mode**- APS ", "**Energy Saving**-**Off**, **Minimum**, **Medium**, **Maximum**" feature will not work.

» THX **Cinema** or THX 3D **Cinema** :This is cinema quality mode to provide you the experience of watching a movie at home.The user will be able enjoy the best level of satisfactory screen quality in any movie without any separate adjustments.Cinema expresses the optimal screen quality when it is darkest. When selecting THX **Cinema**, THX **Bright Room** Aspect ratio changes to Just scan.

» THX **Cinema**(Thomlinson Holman 's Experiment)is the audio and video certification standard of THX established by George Lucas,who directed the movie Star Wars,and Thomlinson. This is the product to be certified in THX display area and guarantees screen quality that exceeds the display standard specification in both hardware and software.

ENGLISH

Setting	Description	
SCREEN	Customizes the PC display options.	
	Option	
	Resolution	Selects a proper resolution when your PC uses.
	Auto Configure	Sets the TV to optimize the options automatically for the TV display.
	Position	Locates the image at the proper position.
	Size	Adjusts the image size.
	Phase	Eliminates horizontal streaking.
	Reset	Restores the options to the default setting.

Basic image options

Setting	Description
Contrast	Increases or decreases the gradient of the video signal. You may use **Contrast** when the bright part of the picture is saturated.
Brightness	Adjusts the base level of the signal in the picture.
Sharpness	Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.
Colour	Adjusts intensity of all colours.
Tint	Adjusts the balance between red and green levels.
Colour Temp.	Set to warm to enhance hotter colours such as red, or set to cool to enhance cooler colours such as blue.
Advanced Control or Expert Control	Customizes the advanced options
Picture Reset	Restores the options of each mode to the factory default

NOTE

- You cannot adjust colour, sharpness and tint in the RGB-PC/HDMI-PC mode.

Advanced image options

Setting	Description
Dynamic Contrast	Adjusts the contrast to keep it at the best level according to the brightness of the screen. The picture is improved by making bright parts brighter and dark parts darker.
Dynamic Colour	Adjusts screen colours so that they look livelier, richer and clearer. This feature enhances hue, saturation and luminance so that red, blue, green and white look more vivid.
Noise Reduction	Reduces screen noise without compromising video quality.
Gamma	You can adjust brightness of dark area and middle gray level area of the picture. » Low: Make the dark and middle gray level areas brighter. » Medium: Express the original picture level. » High: Make the dark and middle gray level area darker.
Black Level	Sets black level of the screen to proper level. This function is available in the following modes: AV (NTSC-M), HDMI, Component or USB » Low: The reflection of the screen gets darker. » High: The reflection of the screen gets brighter. » Auto : Sets black level of the screen to High or Low automatically according to the input signal level.
Film Mode	Makes video clips recorded in film look more natural by eliminating judder effect. DVD and Blu-ray movies are filmed at 24 frames per second (fps).
Colour Gamut	Maximizess the utilization of colour to increase colour quality. » Standard: Displays standard set of colours. » Wide: Increase number of colours used.
Edge Enhancer	Shows clearer and distinctive yet natural edges of the video.
XVYCC (available in Cinema and Expert modes)	*This feature is not available for all models. This is the function to express richer colours. This feature represents rich colours as much as a conventional video signal. This function is enabled in “**Picture Mode** - **Cinema**, **Expert**” when xvYCC signal is inputted through HDMI.
Expert Pattern (available in Expert mode)	This is the pattern necessary for expert adjustment. This function is enabled in “**Picture Mode** - **Expert**” when you watch DTV.
Colour Filter	This is the function to filter the specific colours of the video. You can use the RGB filter to set colour saturation and hue accurately.

Advanced image options

<table>
<tr><th>Setting</th><th colspan="2">Description</th></tr>
<tr><td rowspan="2">Colour Temperature</td><td colspan="2">Adjusts the overall color of the screen by changing the white baseline.</td></tr>
<tr><td>a. Method : 2 Points
• Pattern: Inner, Outer
• Red/Green/Blue Contrast, Red/Green/ Blue Brightness: The adjustment range is -50 to +50.</td><td>b. Method : 20 Point IRE
• IRE (Institute of Radio Engineers) is the unit to display the size of the video signal and can be set among 5, 10, 15 to 100 Plasma TV. You can adjust Red, Green or Blue according to each setting.
• Red/Green/Blue: The adjustment range is -50 to +50.
c. Apply to all inputs</td></tr>
<tr><td>Colour Management System</td><td colspan="2">As the tool used by the experts to make adjustments by using the test patterns, this does not affect other colours but can be used to selectively adjust the 6 colour areas (Red/Green/Blue/ Cyan/Magenta/Yellow).
Colour difference may not be distinctive even when you make the adjustments for the general video.
Adjusts Red/Green/Blue/Yellow/Cyan, Magenta.
Red/Green/Blue/Yellow/Cyan, Magenta Colour: The adjustment range is -30 to +30.
Red/Green/Blue/Yellow/Cyan, Magenta Tint: The adjustment range is -30 to +30.
This feature is disable in RGB-PC and HDMI-PC mode.</td></tr>
</table>

AUDIO settings

- Image shown may differ from your TV.

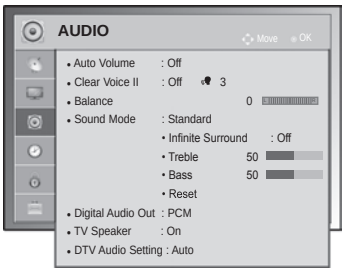

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **AUDIO** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.

- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT**.

The available audio settings are described in the following.

(Depending on model)

Setting	Description	
Auto Volume	Activates the Auto Volume feature to keep the volume level consistent whenever you change channels. The volume level may not be consistent due to different signal conditions of broadcasting stations.	
Clear Voice Ⅱ	Sets whether to enhance human voice clarity. You can adjust the level of clarity when you set this feature on. NOTE • If you select "**On**" for **Clear Voice II**, **Infinite Surround** feature will not work. • Select levels from '-6' to '+6'.	
Balance	Adjust balance between the left and right speakers according to your room environment.	
Sound Mode	Selects one of the preset sound modes or customizes options in each mode.	
	Mode	
	Standard	Select when you want standard-quality sound.
	Music	Select when you listen to music.
	Cinema	Select when you watch movies.
	Sport	Select when you watch sports events.
	Game	Select when you play games.
	Option	
	Infinite Surround	**Infinite Surround** is a patented LG proprietary sound processing technology that strives immersive 5.1 surround sound impression with front two loudspeakers.
	Treble	Controls the dominant sounds in the output. When you turn up the treble, it will increase the output to the higher frequency range.
	Bass	Controls the softer sounds in the output. When you turn up the bass, it will increase the output to the lower frequency range.
	Reset	Resets the sound mode to the default setting.

<table>
<tr><th>Setting</th><th colspan="3">Description</th></tr>
<tr><td>Digital Audio Out</td><td colspan="3">This function allows you to select your preferred Digital Audio Output.
When Dolby Digital is available, selecting Auto in the Digital Audio Out menu will set SPDIF(Sony Philips Digital InterFace) output to Dolby Digital.
If Auto is selected in the digital audio out menu when Dolby Digital is not available, SPDIF output will be PCM(Pulse-code modulation).
Even if both Dolby Digital and Audio language have been set in a channel which broadcast Dolby Digital Audio, only Dolby Digital will be played.</td></tr>
<tr><td></td><td>Item</td><td>Audio Input</td><td>Digital Audio output</td></tr>
<tr><td></td><td>Auto</td><td>MPEG
Dolby Digital
Dolby Digital Plus
HE-AAC</td><td>PCM
Dolby Digital
Dolby Digital
Dolby Digital</td></tr>
<tr><td></td><td>PCM</td><td>All</td><td>PCM</td></tr>
<tr><td>TV Speaker</td><td colspan="3">Turns on the internal speaker of the TV when using an external Hi-Fi system. You can use the TV speaker as an audio output device even if there is no video input.
NOTE
• When the TV speaker is turned off while the Simplink home theater is operating, the sound output automatically switches to the Home theater speaker, but when the TV speaker is turned on, the sound output the TV speaker.
• Some menus in AUDIO are disabled when TV Speaker is set to Off.</td></tr>
<tr><td>DTV Audio Setting(In Digital Mode only)</td><td colspan="3">When different audio types exist in an input signal, this function allows you to select the audio type you want.</td></tr>
<tr><td></td><td colspan="3">Mode</td></tr>
<tr><td></td><td>Auto</td><td colspan="2">Automatically outputs in the order HE-AAC > Dolby Digital+ > Dolby Digital > MPEG.(Except for Italy)
Automatically outputs in the order HE-AAC > Dolby Digital+ > MPEG > Dolby Digital.(Only Italy)</td></tr>
<tr><td></td><td>HE-AAC, Dolby Digital+, Dolby Digital, MPEG</td><td colspan="2">Allows users to select the audio type they want.
ex) If MPEG is selected, MPEG is always outputted.
If MPEG is not supported, another audio type is set in that order.</td></tr>
<tr><td></td><td colspan="3">See p.81 (Audio Language Selection)</td></tr>
</table>

Stereo/Dual Reception (In Analogue Mode Only)

When a programme is selected, the sound information for the station appears with the programme number and station name.

1 Press **Q. MENU** and press the Navigation to access the **Audio** or **Audio Language** and press **OK**.

2 Press the Navigation button to scroll to the sound output and press **OK**.

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I , DUAL II , DUAL I + II

- **Mono sound selection**
  If the stereo signal is weak in stereo reception, you can switch to mono. In mono reception, the clarityof sound is improved.

- **Language selection for dual language broadcast**
  If a programme can be received in two languages (dual language), you can switch to DUAL I, DUAL II or DUAL I+II.

DUAL I Sends the primary broadcast language to the loudspeakers.
DUAL I I Sends the secondary broadcast language to the loudspeakers.
DUAL I+I I Sends a separate language to each loudspeaker.

ENGLISH

Nicam Reception (In Analogue Mode Only)

If the TV is equipped with a receiver for NICAM reception, high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.
Sound output can be selected according to the type of broadcast received.

1 When **NICAM** mono is received, you can select **NICAM MONO** or **FM MONO**.

2 When **NICAM** stereo is received, you can select **NICAM STEREO** or **FM MONO**.
If the stereo signal is weak, switch to **FM MONO**.

3 When **NICAM** dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **FM MONO**.

Speaker Sound Output Selection

In AV, Component, RGB and HDMI mode, you can select output sound for the left and right loudspeakers.
Select the sound output.

L+R: Audio signal from audio L input is sent to the left loudspeaker and audio signal from audio R input is sent to the right loudspeaker.
L+L: Audio signal from audio L input is sent to left and right loudspeakers.
R+R: Audio signal from audio R input is sent to left and right loudspeakers.

TIME settings

- Image shown may differ from your TV.

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **TIME** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT**.

The available time settings are described in the following.

Setting	Description
Clock	Sets the time, date, time zone, and daylight-saving time feature. The time will be set automatically according to a digital channel signal which includes time information provided by the broadcasting station. If not, set the time and date manually. **NOTE** • The TV time is set by the time offset information based on Time Zone and GMT (Greenwich Mean Time) which is received with the broadcast signal and the time is set automatically by a digital signal. • When if the city name in Time Zone is changed into offset, you can change time by 1 hour. • **Time Zone** menu can be changed in **Auto** mode. **Time Zone** Magadan, Kamchatka Vladivostok Yakutsk Irkutsk Krasnoyarsk Omsk Yekaterinburg Moscow, Samara Kaliningrad This Table means the Time Zone table of 9 area of Russia, and when the user selects the Time Zone for his or her area, it automatically sets the time for the corresponding area. However, even though the user selected his or her area, if the broadcasting station's local time offset is not offered, or if the region information does not match, then the user may select the Offset from the Time Zone to set the correct time.

ENGLISH

Setting	Description
Off Time/On Time	Sets the time to turn on or off the TV automatically. To use this function, you should set the current time and date in advance. NOTE • If you do not press any button within 2 hours after the TV turns on by the On Time feature, the TV enters the Standby mode automatically. • If you set both Off time and On time features to the same time, the Off time feature overrides the On time feature.
Sleep Timer	Sets the length of time until the TV to turns off. When you turn the TV off and turn it on again, the Sleep timer feature will be set to off.
Automatic Standby (Depending on model)	If you do not press any button when Automatic Standby function is on, the TV automatically switches to the standby mode. NOTE • This function does not work on Store Demo mode or while software update.

LOCK settings

• Image shown may differ from your TV.

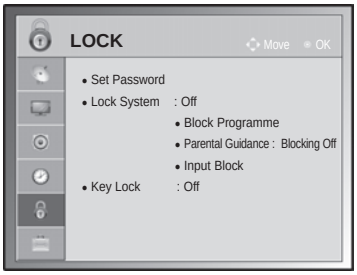

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **LOCK** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT**.

The available lock settings are described in the following.

Setting	Description
Lock System	Activates or deactivates the lock system.
Set Password	Changes the 4-digit password. The default PIN is “0 0 0 0”. When France is selected for Country, password is not ‘0’,‘0’,‘0’,‘0’ but ‘1’,’2’,’3’,’4’. When France is selected for Country, password cannot be set as ‘0’,‘0’,‘0’,‘0’ . If you forget your password, press ‘0’, ‘3’,‘2’, ‘5’ on the remote control handset.
Block Programme	Blocks the programmes that contain inappropriate contents for children by pressing the Green button. The Lock icon appears in front of the blocked programmes. The programmes can be selected but the screen blank and the audio is muted. To watch a locked channel, enter the password. It is available to use this function in **Lock System** ”**On**”
Parental Guidance (In Digital Mode only)	This function operates according to information from the broadcasting station. Therefore if the signal has incorrect information, this function does not operate. A password is required to gain access to this menu. This set is programmed to remember which option it was last set to even if you switch the set off. Prevents children from watching certain adult’s TV programmes, according to the ratings limit set. Enter a password to watch a blocked programme. Rating differs by country.
Input Block	Block the input sources. It is available to use this function in **Lock System** ”**On**”
Key Lock	Locks or unlocks the buttons on the TV.

OPTION settings

- Image shown may differ from your TV.

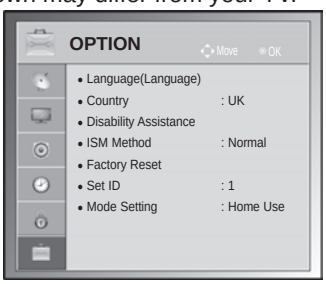

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **OPTION** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT.**

The available general settings are described in the following.

(Depending on model)

<table>
<tr><th>Setting</th><th colspan="2">Description</th></tr>
<tr><td rowspan="6">Language</td><td colspan="2">Selects a language for the display or audio.</td></tr>
<tr><td colspan="2">Option</td></tr>
<tr><td>Menu Language</td><td>Select your desired language.</td></tr>
<tr><td>Audio Language</td><td>The Audio function allows selection of a preferred language.
If audio data in a selected language is not broadcast, the default language audio will be played.
Audio Language OSD Information
<table><tr><th>Display</th><th>Status</th></tr><tr><td>N.A</td><td>Not Available</td></tr><tr><td>MPEG</td><td>MPEG Audio</td></tr><tr><td>D</td><td>Dolby Digital Audio</td></tr><tr><td></td><td>Audio for “Visual Impaired”</td></tr><tr><td>ABC</td><td>Audio for “Hearing Impaired”</td></tr><tr><td>D+</td><td>Dolby Digital Plus Audio</td></tr><tr><td>HE-AAC</td><td>HE-AAC Audio</td></tr></table></td></tr>
<tr><td>Subtitle Language</td><td>Use the Subtitle function when two or more subtitle languages are broadcast. If subtitle data in a selected language is not broadcast, the default language subtitle will be displayed.
Subtitle Language OSD Information
<table><tr><th>Display</th><th>Status</th></tr><tr><td>N.A</td><td>Not Available</td></tr><tr><td>TXT</td><td>Teletext Subtitle</td></tr><tr><td>ABC</td><td>Subtitle for “Hard of Hearing”</td></tr></table></td></tr>
<tr><td>Text Language</td><td>In Digital mode, use the Text language function when two or more Text languages are broadcast. If teletext data in a selected language is not broadcast, the default Text language page will be displayed.</td></tr>
<tr><td colspan="2">NOTE
• When the languages you selected as the primary for Audio Language and Subtitle Language and Text Language are not supported, you can select language in secondary category.
• The audio/subtitles can be displayed in a simpler form with 1 to 3 characters broadcast by the service provider.
• When you select supplementary Audio (Audio for “Visual/Hearing Impaired”) the TV may output a part of the Main audio.</td></tr>
</table>

ENGLISH

<table>
<tr><th>Setting</th><th colspan="3">Description</th></tr>
<tr><td>Country</td><td colspan="3">Selects a desired country.
NOTE
• If you do not finish the set-up Installation Guide by pressing BACK or if you time out on the OSD (On Screen Display) the installation menu will continuously appear until the set up is completed whenever the TV is switched on.
• If you select the wrong local country, teletext may not appear correctly on the screen and some problems may occur during teletext operation.
• The CI (Common Interface) function may not be applied based on country broadcasting circumstances.
• DTV mode control buttons may not function based on country broadcasting circumstances.
• In country that Digital broadcasting regulation isn’t fixed, some DTV function may not work depending on digital broadcasting circumstances.
• The Country Setting “UK” should only be activated in UK.
• If the country setting is set to “--”, European terrestrial digital standard broadcasting programmes are available, but some DTV functions may not work properly.</td></tr>
<tr><td rowspan="5">Disabled Assistance (In Digital Mode only)</td><td colspan="3">Option</td></tr>
<tr><td>Hard of Hearing</td><td colspan="2">This function if for the hearing impaired.</td></tr>
<tr><td rowspan="3">Audio Description</td><td colspan="2">This function is for the blind, and provides explanatory audio describing the current situation in a TV programme in addition to the basic audio.
When Audio Description On is selected, basic audio and Audio Description are provided only for those programmes that have Audio Description included.</td></tr>
<tr><td>Volume</td><td>Changes the Audio Description volume</td></tr>
<tr><td>Beep</td><td>Beeps when a programme with Audio Description information is selected</td></tr>
<tr><td rowspan="4">ISM Method</td><td colspan="3">A frozen or still picture displayed on the screen for prolonged periods will result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the screen for prolonged periods.</td></tr>
<tr><td colspan="3">Option</td></tr>
<tr><td>White Wash</td><td colspan="2">White wash removes permanent images from the screen.
Note: An excessive permanent image may be impossible to clear entirely with White Wash.</td></tr>
<tr><td>Orbiter</td><td colspan="2">Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain
on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.</td></tr>
<tr><td></td><td>Colour Wash</td><td colspan="2">The colour block with the screen moved a little and the white pattern are alternately displayed. It is difficult to sense the afterimage occurred while the temporary afterimage is removed and the colour pattern is operating.</td></tr>
<tr><td>Data Service (only in Ireland.)</td><td colspan="3">This function allow users to choose between MHEG (Digital Teletext) and Teletext if both exist at the same time.</td></tr>
</table>

Setting	Description	
Factory Reset	This function initializes all settings. NOTE • In **Lock System "On"**, if you forget your password, press '0', '3', '2', '5' on the remote control handset.	
Set ID	Adds an ID to the connected devices	
Mode Setting	Default selection is "**Home Use**". We recommend setting the TV to "**Home Use**" mode for the best picture in your home environment.	
	Option	
	Home Use	Selects it for the home environment.
	Store Demo	Selects it for the retail environment.
	Demo Mode	Sets to show special features of the TV. You can cancel the demo mode by pressing any buttons except the Volume and Mute buttons. NOTE • It is not possible to use **Demo Mode** in **Home Use** mode. • In **Store Demo**, **Demo Mode** is automatically set to **On**. • Once **Demo Mode** is set to **Off** in **Store Demo**, **Demo Mode** does not run and only the screen is reset. • The screen is reset automatically after 5 minutes in **Demo Mode**.

ENGLISH

NETWORK Settings

(Depending on model)

1 Press **Home** to access the main menus.

2 Press the Navigation buttons to scroll to **NETWORK** and press **OK**.

3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- To return to the previous level, press **BACK**.

4 When you are finished, press **EXIT**.

• Image shown may differ from your TV.

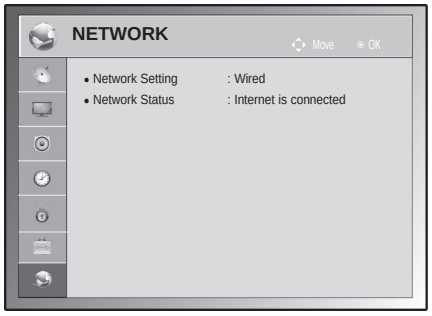

The available network settings are described in the following.

Setting	Description
Network Setting	Configure the network settings (See p.56).
Network Status	Display the network status (See p.57).

MAKING CONNECTIONS

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.
Available external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.

NOTE

- If you record a TV programme on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information on recording, refer to the manual provided with the connected device.
- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.

Connection overview

Connect various external devices to the ports on the TV back panel.

1 Find an external device you want to connect to your TV as shown on the following illustration.

2 Check the connection type of the external device.

3 Go to the appropriate illustration and check the connection details.

(Depending on model)

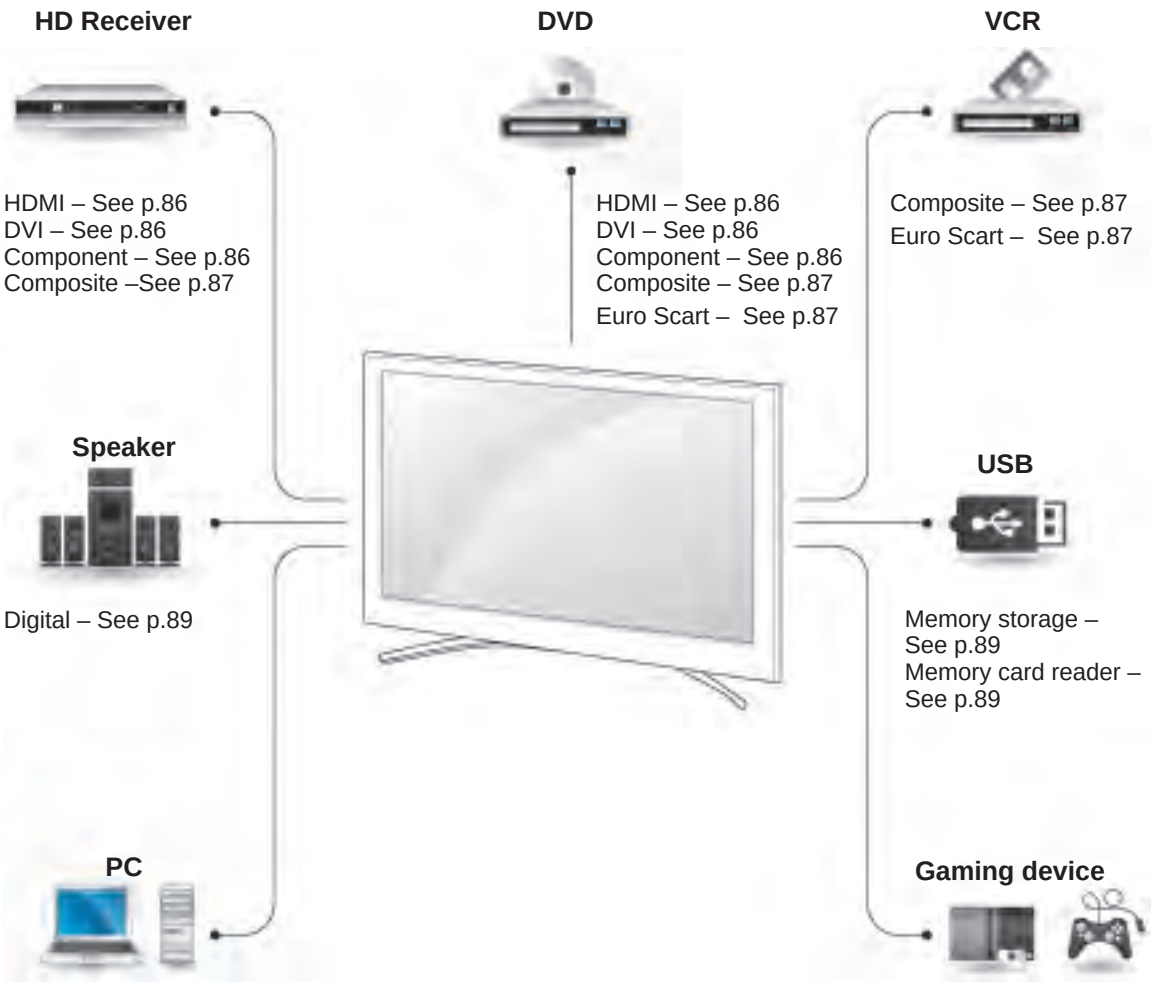

ENGLISH

NOTE

- If you connect a gaming device to the TV, use the cable supplied with the gaming device.

- This section on MAKING CONNECTIONS mainly uses diagrams for the 50/60PZ85** models.
- Image shown may differ from your TV.

Connecting to a HD receiver, DVD, or VCR player

Connect a HD receiver, DVD, or VCR player to the TV and select an appropriate input mode.

HDMI connection

Transmits the digital video and audio signals from an external device to the TV. Connect the external device and the TV with the HDMI cable as shown in the following illustration.

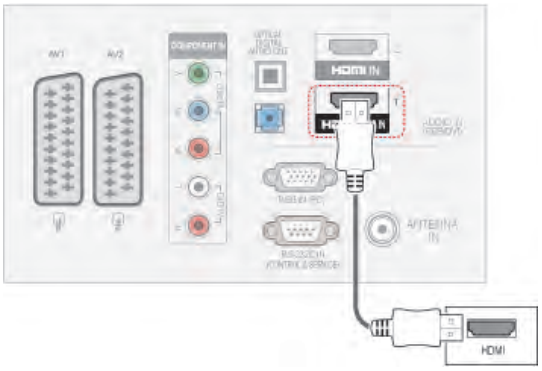

NOTE

- The TV can receive video and audio signals simultaneously when using an HDMI cable.
- If the DVD does not support Auto HDMI, you must set the output resolution appropriately.
- Check that your HDMI cable is High Speed HDMI Cable. If the HDMI cables are not High Speed HDMI Cable, flickering or no screen display can result. Please use the High Speed HDMI Cable.

DVI to HDMI connection

Transmits the digital video signal from an external device to the TV. Connect the external device and the TV with the DVI-HDMI cable as shown in the following illustration. To transmit an audio signal, connect an audio cable.

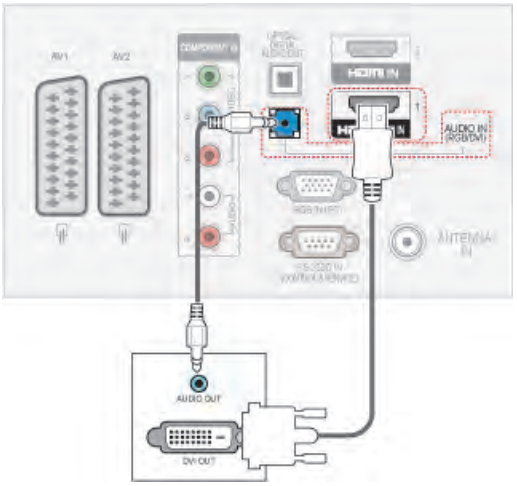

Component connection

Transmits the analogue video and audio signals from an external device to the TV. Connect the external device and the TV with the component cable as shown in the following illustration.

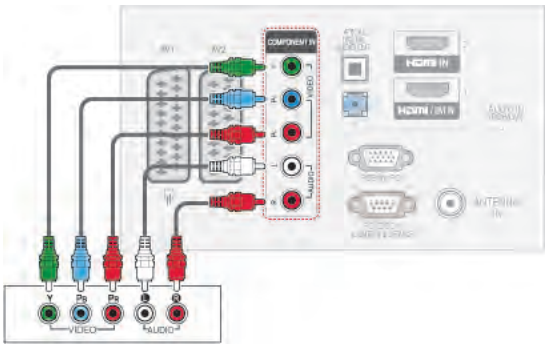

ENGLISH

Euro Scart connection

Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the Euro Scart cable as shown on the following illustration. To display images by using progressive scan, make sure to use the Euro Scart cable.

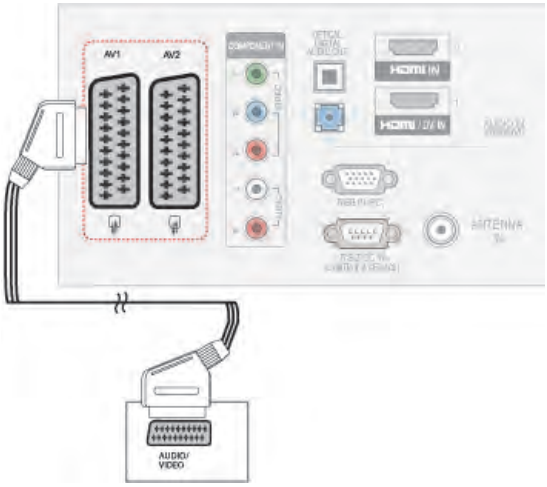

Current input model \ Output Type	AV1 (TV Out[1])	AV2 (Monitor Out[2])
Digital TV	X	O
Analogue TV, AV	Analogue TV	O
Component / RGB	Analogue TV	X
HDMI	Analogue TV	X

1 TV Out : Outputs analogue TV signals.

2 Monitor Out: Outputs the current screen image.

NOTE

- Any Euro scart cable used must be signal shielded.
- When watching digital TV in 3D imaging mode, TV/Monitor out signals cannot be output through the SCART cable. (Only 3D models)
- If you set the 3D mode to On while a scheduled recording is performed on digital TV, monitor out signals cannot be output through the SCART cable, and the recording cannot be performed. (Only 3D models)

Composite connection

Transmits the analogue video and audio signals from an external device to the TV. Connect the external device and the TV with the composite cable as shown in the following illustration.

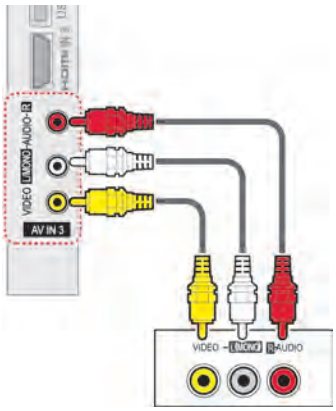

NOTE

- If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/ MONO** jack of the TV.

Connecting to a PC

NOTE

- It is recommended to use the TV set with the HDMI connection for the best image quality.

HDMI connection

Transmits the digital video and audio signals from your PC to the TV. Connect the PC and the TVwith the HDMI cable as shown in the following illustrations.

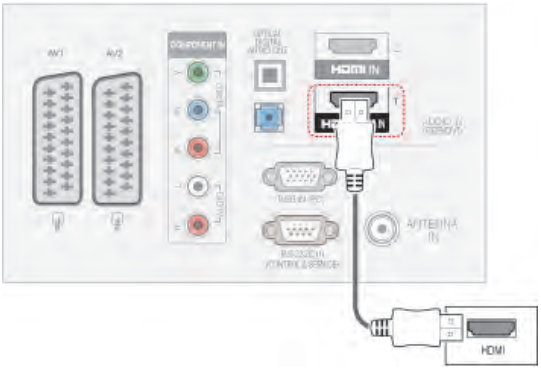

ENGLISH

DVI to HDMI connection

Transmits the digital video signal from your PC to the TV. Connect the PC and the TV with the DVI-HDMI cable as shown in the following illustration. To transmit an audio signal, connect an audio cable.

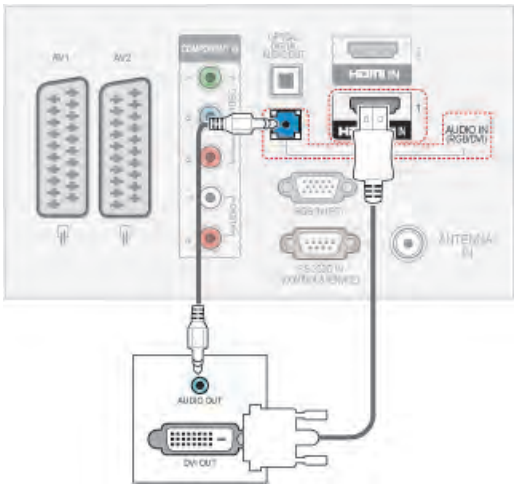

RGB Connection

Transmits the analogue video signal from your PC to the TV. Connect the PC and the TV with the supplied D-sub 15 pin signal cable as shown in the following illustrations. To transmit an audio signal, connect an audio cable.

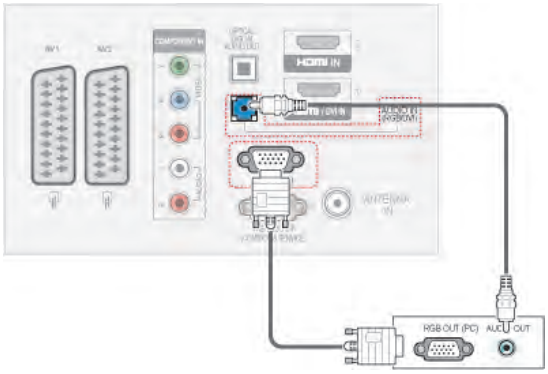

NOTE

- Avoid keeping a fixed image on the set's screen for prolonged periods of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- There may be interference relating to resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode to another resolution or change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.
- The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- We recommend using 1920x1080, 60 Hz(Except for 50PT49**),1024x768, 60 Hz(Only 50PT49**)for the PC mode, this should provide the best picture quality.
- Connect the signal cable from the monitor output port of the PC to the RGB (PC) port of the TV or the signal cable from the HDMI output port of the PC to the HDMI IN (or HDMI/DVI IN) port on the TV.
- Connect the audio cable from the PC to the Audio input on the TV. (Audio cables are not included with the TV).
- If using a sound card, adjust PC sound as required.
- If the graphic card on the PC does not output analogue and digital RGB simultaneously, connect only one of either RGB or HDMI IN (or HDMI/DVI IN) to display the PC output on the TV.
- DOS mode may not work depending on the video card if you use an HDMI to DVI cable.
- If you use too long an RGB-PC cable, there may be interference on the screen. We recommend using under 5m of cable. This provides the best picture quality.

Connecting to an audio system

Use an external audio system instead of the built-in speaker.

NOTE

- If you use an external audio device instead of the built-in speaker, set the TV speaker feature to off (See p.77).

Digital optical audio connection

Transmits the digital audio signal from the TV to an external device. Connect the external device and the TV with the optical audio cable as shown in the following illustration.

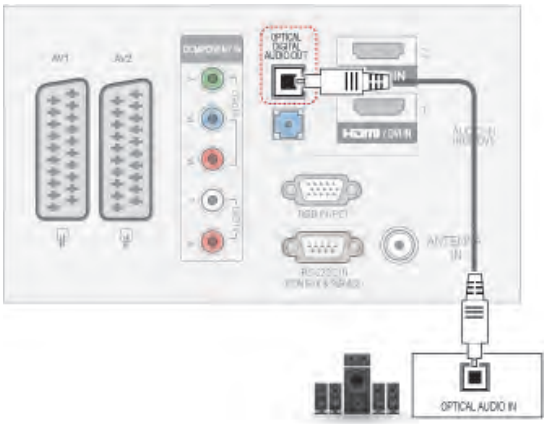

NOTE

- Do not look into the optical output port. Looking at the laser beam may damage your vision.

Connecting to a USB

Connect a USB storage device such as s USB flash memory, external hard drive or a USB memory card reader to the TV and access the My media menu to use various multimedia files. See “Connecting USB storage devices” on p.58 and see “**Browsing files**” on p.59 .

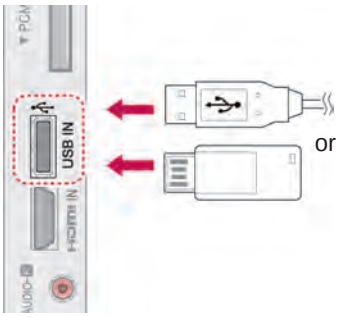

Connecting to a CI Module

View the encrypted (pay) services in digital TV mode.
See p.25.

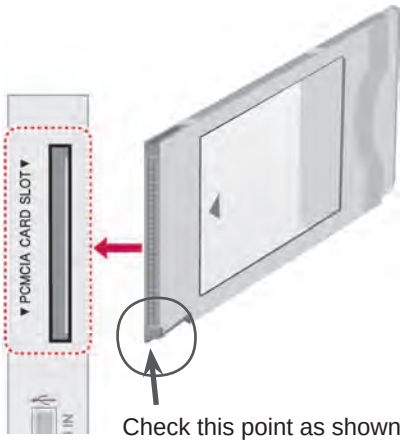

Check this point as shown and insert the CI Module.

NOTE

- Check if the CI module is inserted into the PCMCIA card slotin the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot.

ENGLISH

SIMPLINK connection

Use the TV remote control to play and control the AV device connected with the HDMI cable through HDMI-CEC. Your TV only works with the devices that support HDMI-CEC.

Connect one end of the HDMI cable to the HDMI/DVI IN or HDMI IN terminal on the rear of the TV and the other end to the SIMPLINK device.

In wireless external output, SIMPLINK function is not supported.

NOTE

- If the connected device does not support HDMI-CEC, the SIMPLINK feature is unavailable.
- To operate SIMPLINK, an High Speed HDMI Cable with *CEC function should be used. (*CEC: Consumer Electronics Control).

Activating the SIMPLINK feature

1 Press SIMPINK to access the SIMPLINK menus.

2 Press the Navigation buttons to scroll to **On**.

3 Press the Navigation buttons to scroll to one of the devices and press **OK**.

- Image shown may differ from your TV.

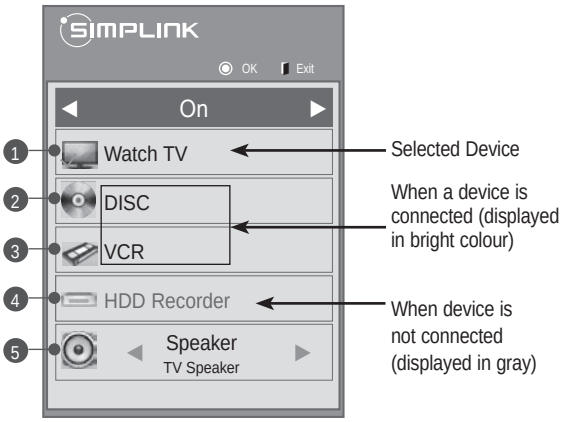

No.	Description
1	Displays the previously viewed TV channel.
2	Plays discs. When multiple discs are available, the title of the disc appears at the bottom of the screen.
3	Controls the connected VCR.
4	HDD recordings playback: Controls the recording stored in HDD.
5	Audio out to home theater speaker or Audio out to TV: Changes the audio output between Home theater speaker and TV speaker.

- A check mark appears in front of the selected device.
- Available devices display in a bright colour.
- Unavailable devices display in grey.

4 Control the selected AV device.

- **Direct Play**: After connecting AV devices to the TV, you can directly control the devices and play media without additional settings.
- **Select AV device**: Enables you to select one of the AV devices connected to the TV.
- **Disc playback**: Control connected AV devices by pressing the Navigation buttons, **OK**, ▶, ■, II, ◀◀ and ▶▶ buttons.
- **Power off all devices**: When you power off the TV, all connected devices are turned off.
- **Switch audio-out**: Offers an easy way to switch audio-out.
- **Sync Power on**: When the equipment with SIMPLINK function connected HDMI terminal starts to play, The TV will automatically turn on.

NOTE

- If you change the input source by pressing INPUT, the progressing function of the SIMPLINK device will stop.
- If you select a device that has the home theater feature, the sound output automatically switches to the home theater speaker and the TV speaker turns off.
- If a connected SIMPLINK home theater system does not play the audio from the TV, connect the DIGITAL AUDIO OUT terminal on the rear of the TV to the DIGITAL AUDIO IN terminal on the back of the SIMPLINK device with an optical cable.

ENGLISH

TELETEXT

• This feature is not available in all countries.

Teletext is a free service broadcast by most TV stations which gives up-to-theminute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

Switch On/Off

Press the **TEXT** button to switch to teletext. The initial page or last page viewed appears on the screen.
Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.
Press the **TEXT** button to switch off teletext. The previous mode reappears.

Simple Text

Page selection

1 Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.

2 The **P** ∧ ∨ button can be used to select the preceding or following page.

Top Text

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

Block / Group / Page Selection

1 With the blue button you can progress from block to block.

2 Use the yellow button to proceed to the next group with automatic overflow to the next block.

3 With the green button you can proceed to the next existing page with automatic overflow to the next group..

4 Alternatively the **P** ∧ button can be used. The red button returns to the previous selection. Alternatively the **P** ∨ button can be used.

Direct Page Selection

As with SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

ENGLISH

Fastext

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

Page selection

1 Press the **T.OPT** button and then use Navigation buttons to select menu. Display the index page.

2 You can select the pages which are colour coded along the bottom line with corresponding coloured buttons.

3 AS with SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.

4 The **P** ∧ ∨ button can be used to select the preceding or following page.

Special Teletext Function

Press the **T. OPT** button and then use Navigation buttons to select the **Text Option** menu.

Index

Select the each index page.

Time

When viewing a TV programme, select this menu to display the time at the top right hand corner of the screen.
In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the Red/Green, **< >** or NUMBER buttons.

Hold

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages.
The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this menu is selected the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inactive.

Reveal

Select this menu to display concealed information, such as solutions to riddles or puzzles.

Update

Displays the TV picture on the screen while waiting for a new teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number. Select this menu again to view the updated teletext page.

NOTE

- In UK(In digital mode), **T. OPT** button does not work.

DIGITAL TELETEXT

- This function works in UK, Ireland only.

The TV gives you access to digital teletext which is greatly improved in various aspects such as text, graphics etc. This digital teletext can access special digital teletext services and specific services which broadcast digital teletext.

Teletext within digital service

1 Press the numeric or **P** ∧ ∨ button to select a digital service which broadcasts digital teletext.

2 Follow the indications on digital teletext and move onto the next step by pressing **TEXT**, **OK, Navigation button**, **Red**, **Green**, **Yellow**, **Blue** or **NUMBER** buttons and etc.

3 To change digital teletext service, select a different service by the numeric or **P** ∧ ∨ button.

Teletext in digital service

1 Press the numeric or **P** ∧ ∨ button to select a certain service which broadcasts digital teletext.

2 Press the **TEXT** or coloured button to switch on teletext.

3 Follow the indications on digital teletext and move onto the next step by pressing **OK, Navigation button**, **Red**, **Green**, **Yellow**, **Blue** or **NUMBER** buttons and so on.

4 Press the **TEXT** or colour button to switch off digital teletext and return to **TV** viewing.

Some services may allow you to access text services by pressing the Red button.

ENGLISH

MAINTENANCE

Update and clean your TV regularly to keep the best performance and to extend the product lifespan.

Cleaning your TV

CAUTION

- Make sure to turn the power off and disconnect the power cord and all other cables first.
- When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

Screen and frame

To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth.
To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth.

CAUTION

- Do not push, rub, or hit the surface with your fingernail or a sharp object, as this may result in scratches on the screen and image distortions.
- Do not use any chemicals, such as waxes, benzene, alcohol, thinners, insecticides, air fresheners, lubricants, as these may damage the screen's finish and cause discolourations.

Cabinet and stand

To remove dust or light dirt, wipe the cabinet with a dry, clean, and soft cloth.
To remove major dirt, wipe the cabinet with a soft cloth dampened in a clean water or water containing a small amount of mild detergent. Then wipe immediately with a dry cloth.

CAUTION

- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.
- Do not use any chemicals as this may deteriorate the surface.

Power cord

Remove the accumulated dust or dirt on the power cord regularly.

Preventing “Image burn” or “Burn-in” on your TV screen

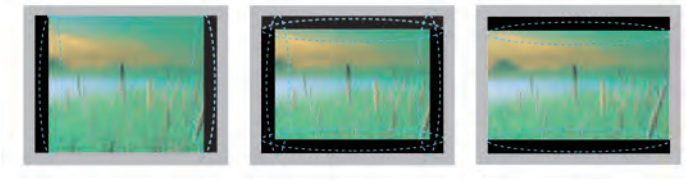

- If a fixed image displays on the TV screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is “image burn” or “burn-in” and not covered by the warranty.
- If the aspect ratio of the TV is set to 4:3 for a long period of time, image burn may occur on the letterboxed area of the screen.
- Avoid displaying a fixed image on the TV screen for a long period of time (2 or more hours for LCD, 1 or more hours for the Plasma TV) to prevent image burn.

TROUBLESHOOTING

General

Problem	Resolution
Cannot control the TV with the remote control.	• Check the remote control sensor on the product and try again. • Check if there is any obstacle between the product and the remote control. • Check if the batteries are still working and properly installed (⊕ to ⊕, ⊖ to ⊖). • Check if the appropriate input mode such as TV or VCR is set for using the remote control.
No image display and no sound is produced.	• Check if the product is turned on. • Check if the power cord is connected to a wall outlet. • Check if there is a problem in the wall outlet by connecting other products.
Image appears slowly when the TV turns on.	• The image is muted during the product startup process. This is normal. If the image does not appear in a few minutes, unplug the TV for 30 seconds and try again. If the image still does not appear, contact the authorized service center in your local area.
Cannot connect external devices.	• Refer to the "**Connection overview**" and connect an external device.
The TV turns off suddenly.	• Check the power control settings. The power supply may be interrupted. • Check if the Auto sleep feature is activated in the Time settings. Refer to the "**Sleep Timer**". • If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.

ENGLISH

Audio

Problem	Resolution
No sound is produced while images are displaying.	• Press ◿ **+** or **-** button. • Check if the sound is muted by pressing **MUTE**. • Scroll to other channels. There may a problem with the broadcast. • Check if the audio cables are connected properly.
One of the speakers produce noises or does not produce sound.	• A change in ambient humidity or temperature may result in an unusual noise when the product turns on or off. • There is no problem with your product.

Video

Problem	Resolution
An image displays in black and white or the colour quality is poor.	• Adjust the colour setting in the **PICTURE** menu. • Keep a sufficient distance between this product and other electronic products. • Scroll to other channels. There may a problem with the broadcast.
Horizontal or vertical bars appears or images blur	• Check if there are local interferences such as an electrical appliance or power tool.
Lines or streaks appear on images	• Check the antenna or aim the antenna to the proper direction.
Afterimages (ghosts) appear when the product turns off	• Pixels may have been damaged from a fixed image displayed for a long time (image burn). Use a screen saver to prevent the pixel damage on the screen.
The power is on but the screen appears extremely dark.	• Adjust the brightness and contrast in the **PICTURE** menu.
“No Signal” appears on the screen.	• Check if the signal cable is connected between the TV and products properly. • Check the selected input source by pressing **INPUT**.
The display offset is wrong.	• Adjust the position setting in the **PICTURE** menu. • Check if the video card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution using the display settings on the external device.
Thin lines appear in the background of the screen.	• Check the video cable connections.
Horizontal noises appear or characters blur.	• Adjust the Phase setting in the **PICTURE** menu. Refer to the “**SCREEN**”.
The reception on some channels is poor	• Scroll to other channels. There may a problem with the broadcast. • The station signal may be weak. Aim the antenna to the proper direction. • Check if there is local interference such as an electrical appliance or power tool.

Pentouch

Problem	Resolution
The touch pen does not work.	• Check that you used the remote control to enter Pentouch mode. • Check that the Pentouch dongle is connected to the computer and the red LED is on. • Press the ⏻ /Home button on the touch pen to check that it is powered on. • Check that the touch pen is paired for use. (The touch pen is correctly paired if the red LED is on once when you press the ⏻ /Home button on the touch pen.) • Set the computer screen to display only on the TV.
The TV screen doesn’t look normal when using Pentouch.	• A Check that the computer is correctly connected to the TV. • A Check that you are using the optimal resolution. • Set the aspect ratio on the TV to Just Scan.
The touch pen is touched on wrong positions.	• Set the computer screen to display only on the TV. • If the point you touch on the TV screen using the touch pen and the point indicated as touched on the computer screen do not match when the computer and the TV are connected by a PC signal (RGB) cable, use the TV remote control to select [Home] → [PICTURE] → [SCREEN] (RGB) , then select [Auto Configure] to adjust the screen.
The touch pen movement is not smooth.	• Check whether the computer and the TV are too far from each other. Check whether there are too many obstructions between the computer and the TV. • A Check whether many other applications are running on the computer. (Please avoid running other applications while using the Pentouch program.)

SPECIFICATIONS

MODELS		50PZ85**	60PZ85**
		50PZ850-ZA / 50P850T-ZA 50PZ850N-ZA / 50PZ850A-ZA	60PZ850-ZA / 60P850T-ZA 60PZ850N-ZA / 60PZ850A-ZA
Dimensions (W x H x D)	With stand	1168.7 mm x 777 mm x 349.2mm	1387.1 mm x 920.5 mm x 395.6mm
	Without stand	1168.7 mm x 712.2 mm x 52.5 mm	1387.1 mm x 834.9 mm x 52.5 mm
Weight	With stand	30.1 kg	42.0 kg
	Without stand	28.1 kg	38.5 kg

MODELS		50PT49**
		50PT490-ZD / 50PT490T-ZD 50PT490N-ZD / 50PT490A-ZD
Dimensions (W x H x D)	With stand	1168.7 mm x 777 mm x 349.2 mm
	Without stand	1168.7 mm x 712.2 mm x 52.5 mm
Weight	With stand	29.4 Kg
	Without stand	27.4 Kg
CI Module Size (Width x Height x Depth)		100.0 mm x 55.0 mm x 5.0 mm

Product specifications shown above may be changed without prior notice due to upgrade of product functions.
For the power supply and power consumption, refer to the label attached to the product.

Environment condition	Operating Temperature Operating Humidity	0 °C to 40 °C Less than 80 %
	Storage Temperature Storage Humidity	-20 °C to 60 °C Less than 85 %

	Digital TV[1]	Digital TV	Analogue TV
Television System	DVB-T/T2 DVB-C	DVB-T DVB-C	PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L'[2]
Programme Coverage	VHF, UHF		VHF: E2 to E12, UHF: E21 to E69, CATV: S1 to S20, HYPER: S21 to S47
Maximum number of storable programmes	1,000		
External Antenna Impedance	75 Ω		75 Ω

1 Only DVB-T2 support models
2 Except for DVB-T2 support models

ENGLISH

RGB-PC, HDMI/DVI-PC supported mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
720x400	31.468	70.08
640x480	31.469	59.94
800x600	37.879	60.31
1024x768	48.363	60.00
1280x768	47.78	59.87
1360x768	47.72	59.80
1280x1024	63.981	60.02
1920x1080 (RGB-PC)	66.587	59.93
1920x1080 (HDMI-PC)	67.5	60.00

(Except for 50PT49**)

HDMI/DVI-DTV supported mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
720x480	31.469 31.5	59.94 60
720x576	31.25	50
1280x720	37.5 44.96 45	50 59.94 60
1920x1080	33.72 33.75 28.125 26.97 27 33.716 33.75 56.25 67.43 67.5	59.94 60 50 23.97 24 29.976 30.00 50 59.94 60

Component port connecting information

Component ports on the TV	Y	P_B	P_R

Video output ports on DVD player	Y	P_B	P_R
	Y	B-Y	R-Y
	Y	Cb	Cr
	Y	Pb	Pr

Signal	Component
480i/576i	O
480p/576p	O
720p/1080i	O
1080p	O (50 Hz / 60 Hz only)

RF SPECIFICATIONS

- RF module(BM-LDS201) specification(Only 50/60PZ85**)

For TV By using a 2.4 GHz bandwidth radio frequency(RF).

» Output : 1 dBm or lower
» Maximum Communication Distance : 10 m in an open space
» Bandwidth : 2.4 GHz (2.4035 GHz - 2.4783 GHz)
» Transfer Rate : 250 kbps

FCC ID of RF module inside TV
FCC ID : BEJLDS201

CE

ENGLISH

Video supported mode

File / Extension name	Video Decoder	Audio Codec	Max Resolution
mpg, mpeg	MPEG1, MPEG2	MP2,MP3,Dolby Digital,LPCM	1920x1080@30p (only , Motion JPEG 640x480@30p)
dat	MPEG1	MP2	
ts,trp,tp	MPEG2, H.264/AVC, VC1	MP2,MP3,Dolby Digital, AAC,HE-AAC	
vob	MPEG1, 2	MP2,MP3,Dolby Digital,LPCM	
mp4, mov	MPEG4,DivX 3.11, DivX 4.12, DivX 5.x, DivX 6, Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1/2, H.264/AVC	AAC,HE-AAC,MP3	
mkv	H.264/AVC, MPEG-1,2,4	MP2,MP3,Dolby Digital,AAC HE-AAC,LPCM	
divx, avi	MPEG2, MPEG4,DivX 3.11, DivX 4.DivX 5, DivX 6, Xvid 1.00, Xvid 1.01, Xvid 1.02, Xvid 1.03, Xvid 1.10-beta1/2, H.264/AVC	MP2,MP3,Dolby Digital,LPCM, ADPCM,AAC,HE-AAC	
Motion JPEG (avi, mp4, mkv)	JPEG	LPCM, ADPCM	
asf, wmv	VC1	WMA	
flv	Sorenson H.263, H264/AVC	MP3, AAC	

3D supported mode

	Signal	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Playable 3D video format
HDMI Input	720p	1280 X 720	44.96 / 45	59.94 / 60	Top & Bottom, Side by Side
			89.9 / 90	59.94/60	HDMI 3D Frame Packing
			37.5	50	Top & Bottom, Side by Side
			75		HDMI 3D Frame Packing
	1080i	1920 X 1080	33.72 / 33.75	59.94/60	Top & Bottom, Side by Side
			28.125	50	
	1080p	1920 X 1080	69.433 / 67.50	59.94/60	Top & Bottom, Side by Side, Checker Board, Single Frame Sequential
			56.250	50	
			27	24	Top & Bottom, Side by Side, Checker Board
			53.95 / 54	23.98/24	HDMI 3D Frame Packing
			33.75	30	Top & Bottom, Side by Side, Checker Board
USB Input	1080p	1920 X 1080	33.75	30	Top & Bottom, Side by Side, Checker Board, MPO(Photo)
	Resolution				Playable 3D video format
	Other Resolution				Top & Bottom, Side by Side
PC Input	1920 X 1080		66.587	59.93	Top & Bottom, Side by Side,
Component Input	720p	1280 X 720	44.96 45.00 37.50	59.94 60.00 50.00	Top & Bottom, Side by Side
	1080i	1920 X 1080	33.72 33.75 28.125	59.94 60.00 50.00	Top & Bottom, Side by Side
	Signal				Playable 3D video format
DTV	720p, 1080i				Top & Bottom, Side by Side